


Fuse Positions , (L0L)

From September 2014




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




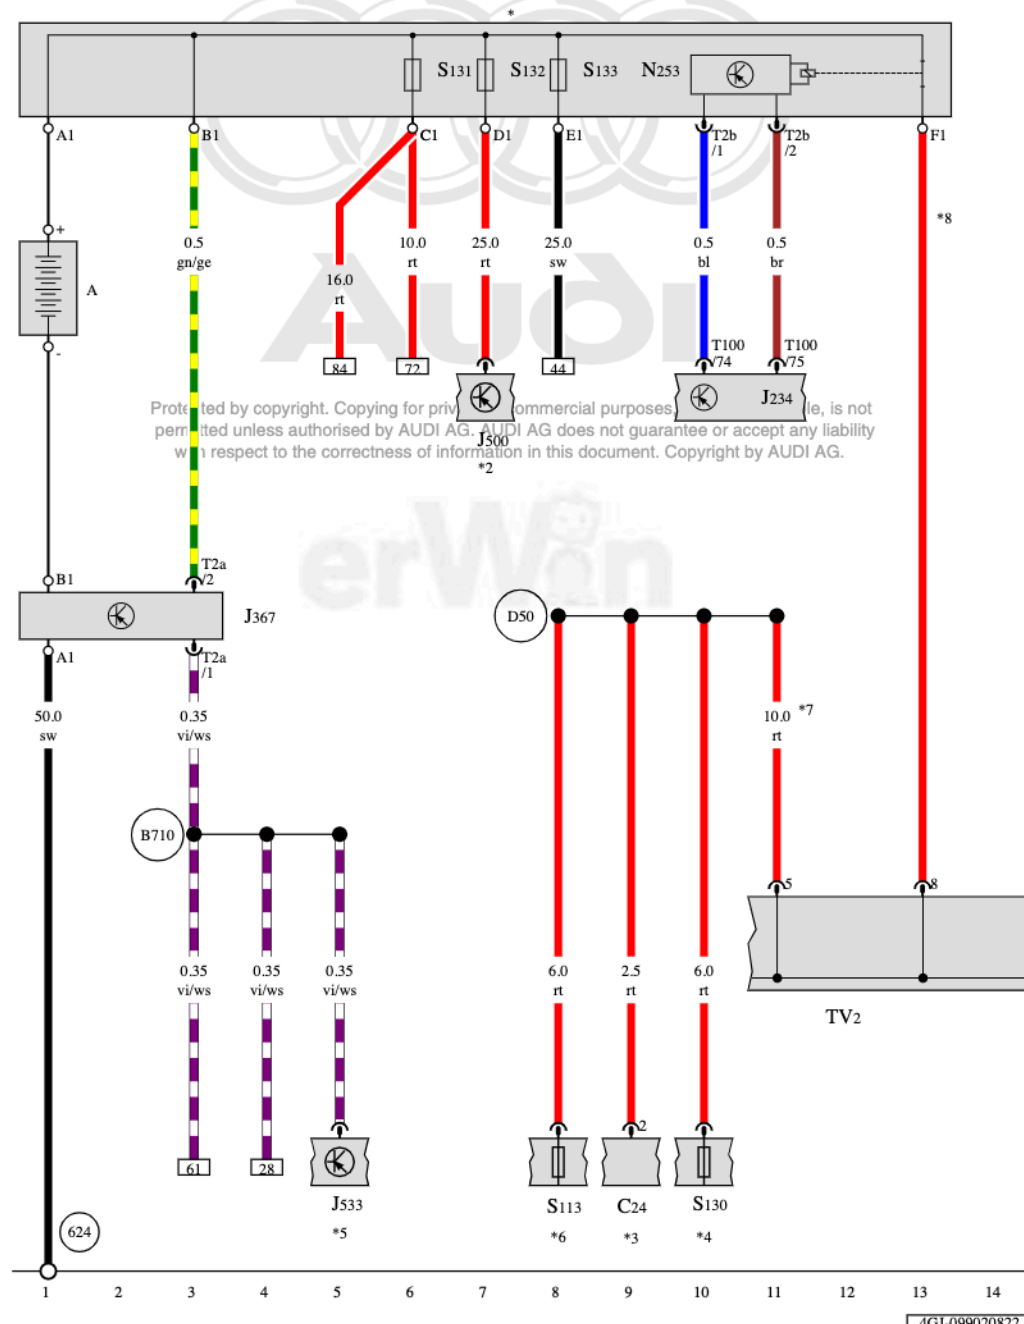

Starter, Generator, Terminal 30 Wire Junction, Battery Jump Start Terminal

- B Starter
- C Generator
- C1 Voltage Regulator
- J293 Radiator Fan Control Module
- J671 Radiator Fan Control Module 2
- S42 Radiator Fan Fuse
- S104 Radiator Fan Second Speed Fuse
- TV2 Terminal 30 Wire Junction
- T2 2-Pin Connector
- T5 5-Pin Connector, In the Center Plenum Chamber
- T14t 14-Pin Connector, Left Plenum Chamber E-Box Connector Station, Black
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, White
- U6 Battery Jump Start Terminal
- 13 Ground Connection in Engine/Motor Compartment, Right
- 685 Ground Connection 1 on Right Front Longitudinal Member
- * Refer to Applicable Engine Wiring Diagram

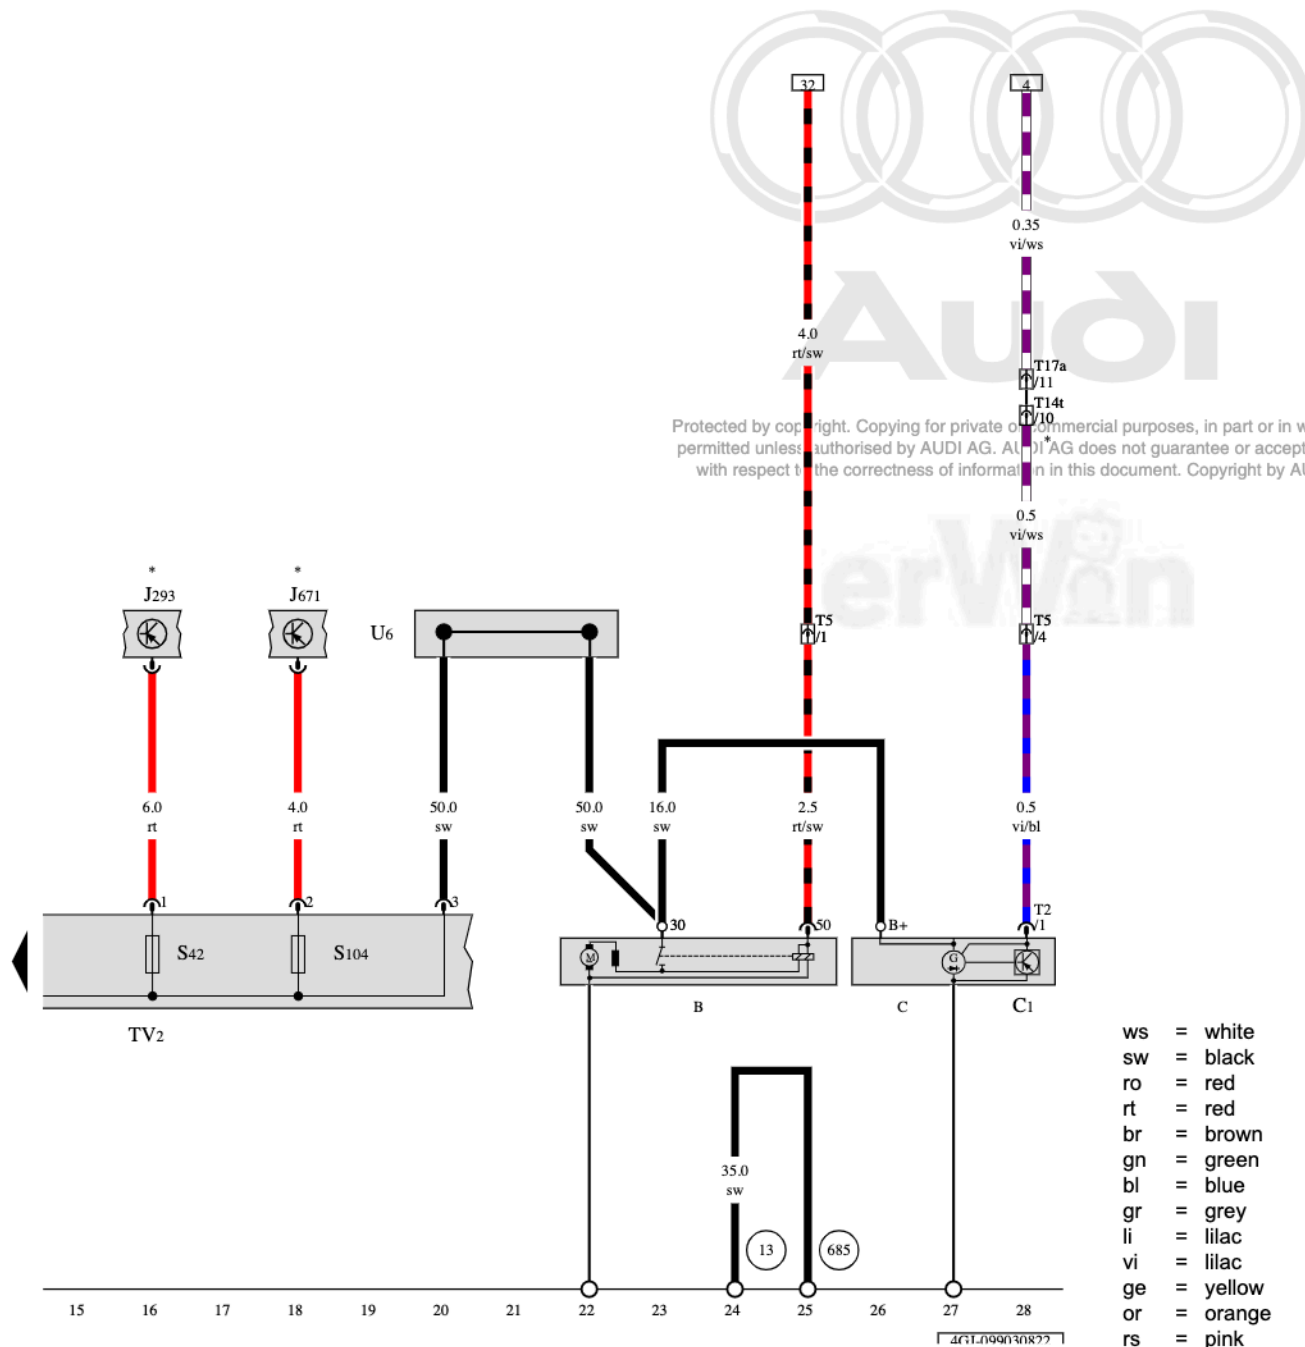

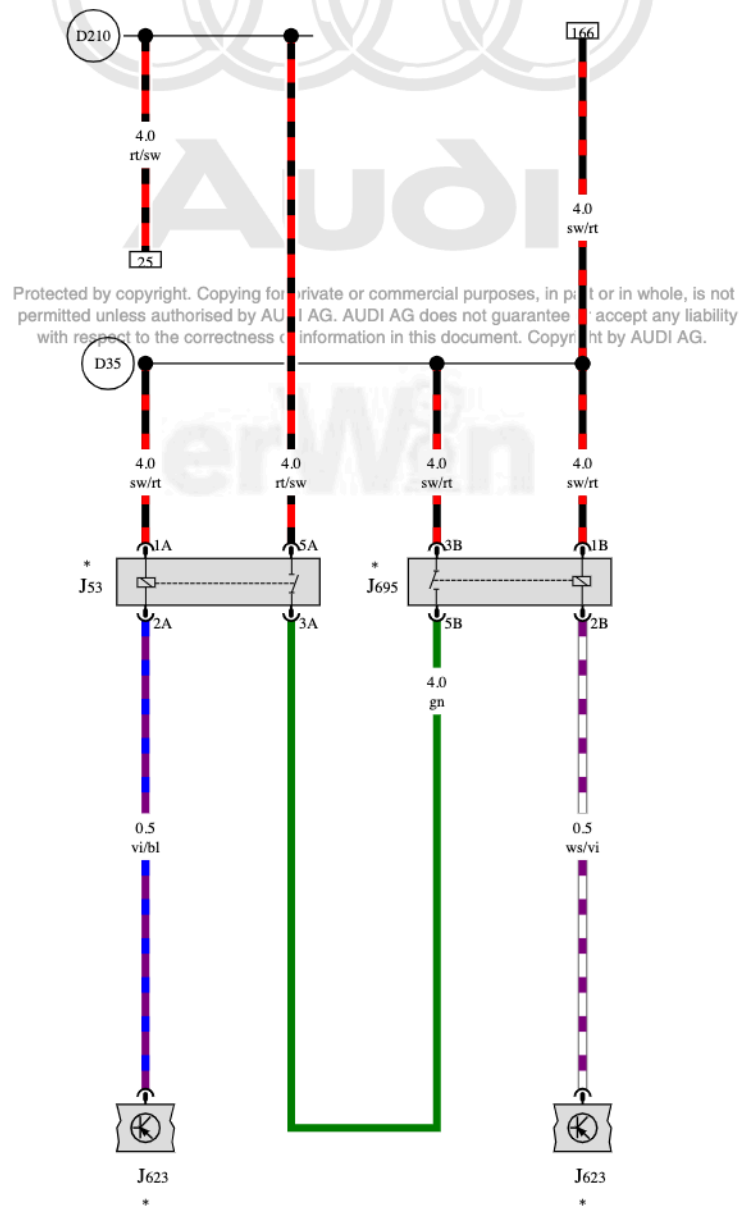

Starter Relay, Starter Relay 2

J53 Starter Relay
J623 Engine/Motor Control Module
J695 Starter Relay 2

D35 Positive Connection 1 (15a) (in Engine Pre-Wiring Harness)


D210 Connection 50 (in Engine/Motor Compartment Wiring Harness)

* Refer to Applicable Engine Wiring Diagram

Terminal 15 Power Supply Relay, Terminal 15 Power Supply Relay 2

- J329 Terminal 15 Power Supply Relay
- J393 Comfort System Central Control Module
- J681 Terminal 15 Power Supply Relay 2
- T32g 32-Pin Connector

- 383 Ground Connection 18 (in Main Wiring Harness)
- B273 Positive Connection (15) (in Main Wiring Harness)
- B285 Positive Connection 9 (15a) (in Main Wiring Harness)
- B315 Positive Connection 1 (30a) (in Main Wiring Harness)
- * Refer to Applicable Standard Equipment Wiring Diagram

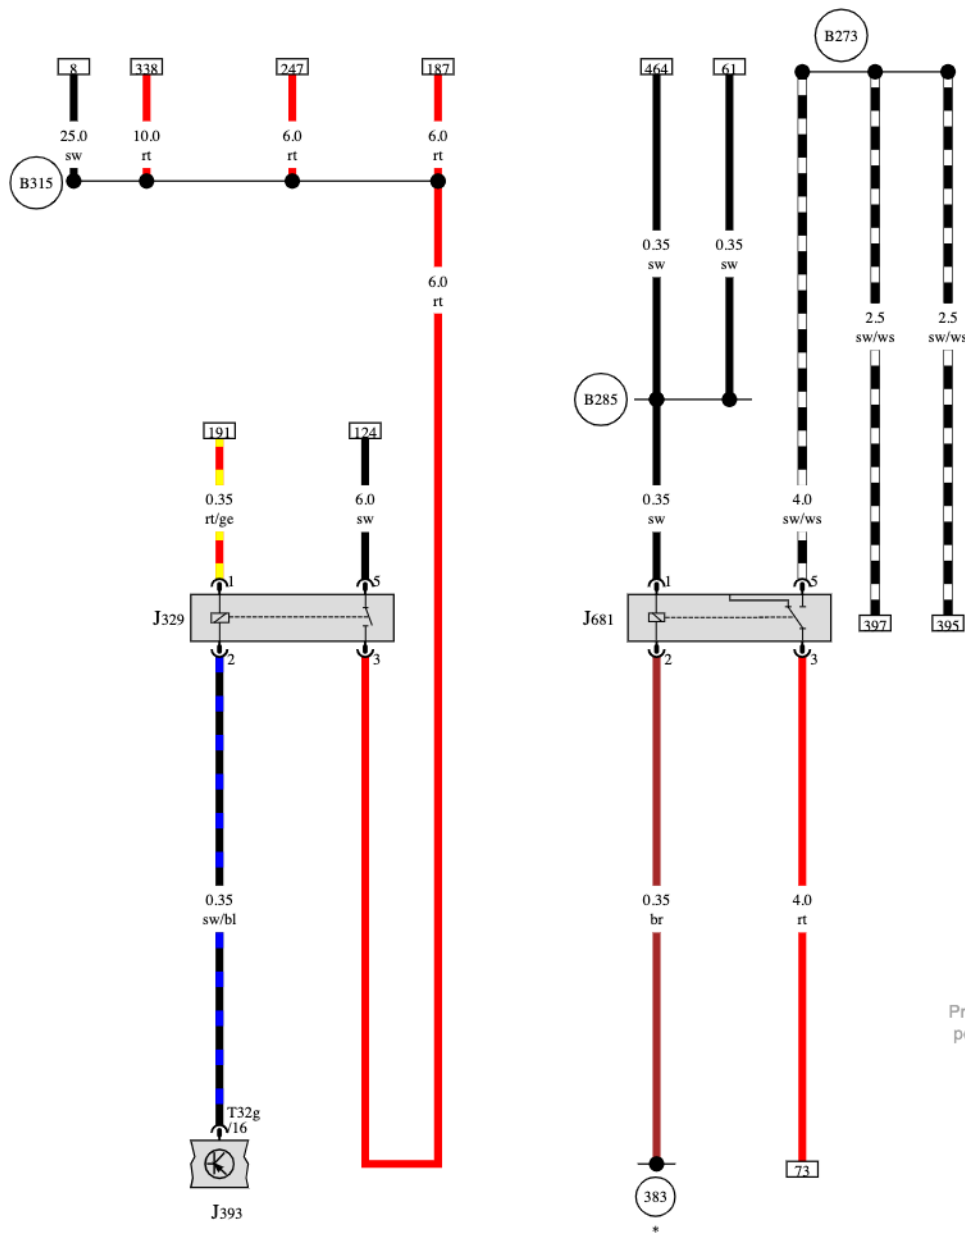

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Voltage Stabilizer


- J532 Voltage Stabilizer
- SA9 Fuse 9 (On Fuse Panel A)
- T12p 12-Pin Connector
- T14u 14-Pin Connector, Left Plenum Chamber E-Box Connector Station, Black
- T17b 17-Pin Connector, Left Plenum Chamber E-Box Connector Station

51 Ground Connection in Luggage Compartment, Right



385 Ground Connection 20 (in Main Wiring Harness)

- * For Vehicles with Start/Stop System
- *2 Refer to Applicable Engine Wiring Diagram
- *3 For Vehicles with 400 W Voltage Stabilizer

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

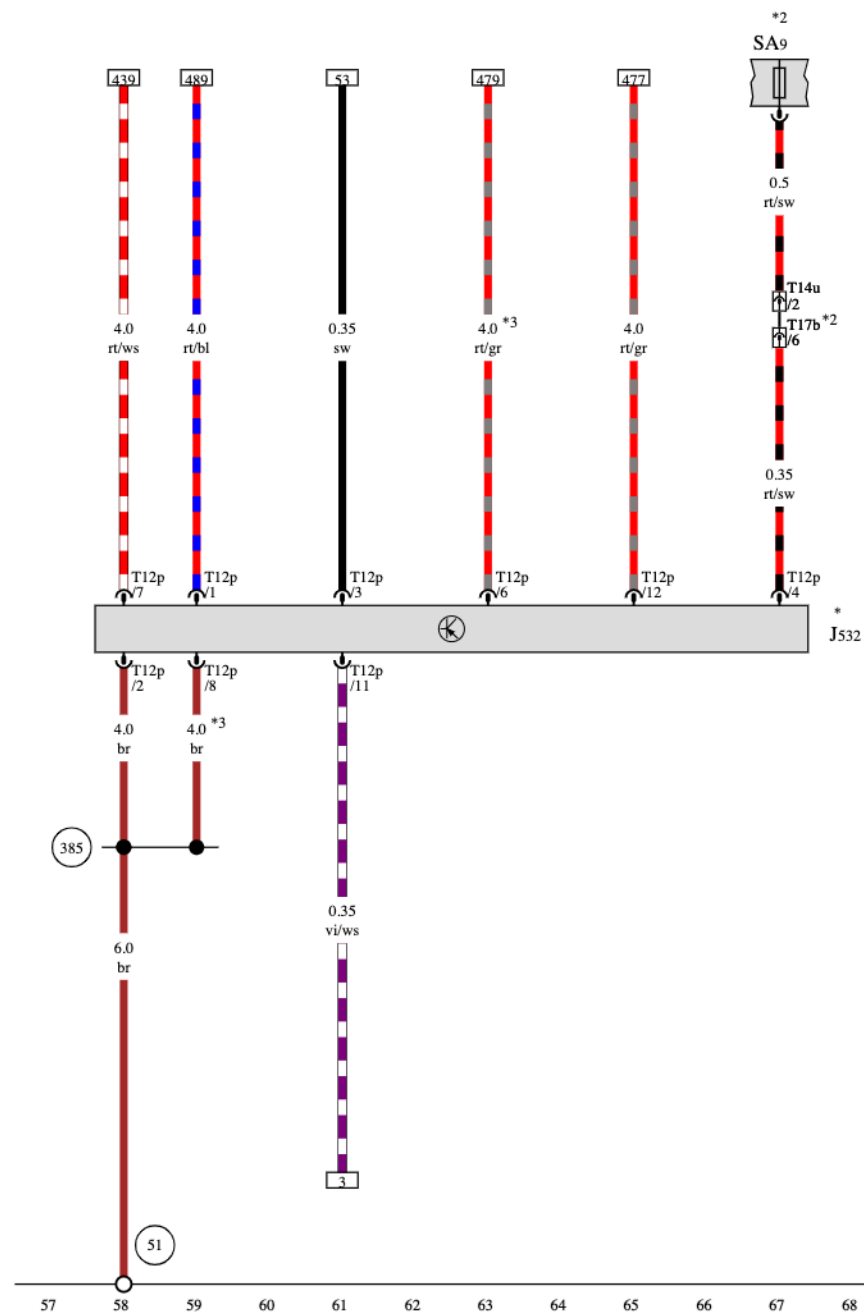

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

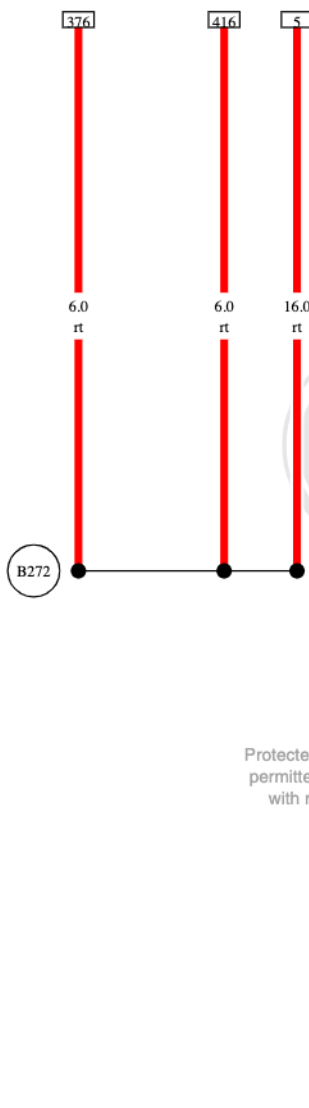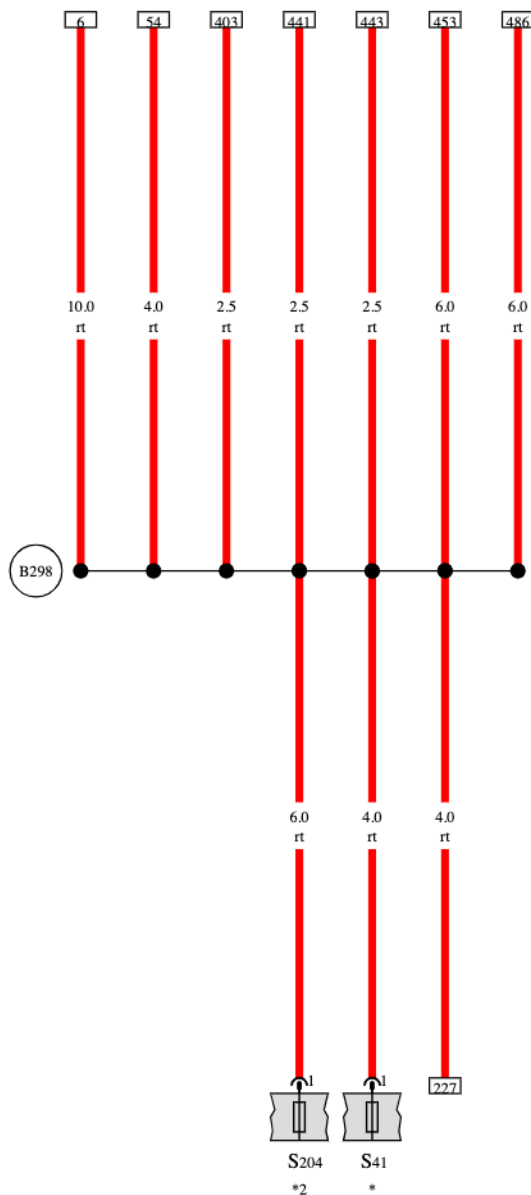

Positive Connection (30) (in Main Wiring Harness),
Positive Connection 2 (30) (in Main Wiring Harness)

S41 Rear Window Defogger Fuse
S204 Fuse 1 (Terminal 30)

B272 Positive Connection (30) (in Main Wiring Harness)

B298 Positive Connection 2 (30) (in Main Wiring Harness)

* Refer to Applicable Standard Equipment Wiring Diagram
*2 For Vehicles with Level Control System

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink


Fuse Panel B, Fuse Panel 1

- E461 Front Center Console Control Head
- E538 Electromechanical Parking Brake Button
- J345 Towing Recognition Control Module
- J359 Low Heat Output Relay
- J360 High Heat Output Relay
- J431 Headlamp Range Control Module
- J500 Power Steering Control Module
- J604 Auxiliary Heater Control Module
- J882 Seat Heating Control Module
- J897 Ionizer Control Module
- J931 Assembly Mount Control Module
- SB Fuse Panel B
- ST1 Fuse Panel 1, Black
- SB1 Fuse 1 (On Fuse Panel B)
- T6ai 6-Pin Connector
- T6ak 6-Pin Connector
- T6al 6-Pin Connector, On the Left Front of the Vehicle Floor
- T6bp 6-Pin Connector
- T12h 12-Pin Connector
- T16d 16-Pin Connector
- T17f 17-Pin Connector, In the Left A-Pillar Connector Station, White
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station, Blue
- T26 26-Pin Connector


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Audi AG. Audi AG does not guarantee or accept any liability with respect to the content of this document.

- B281 Positive Connection 5 (15a) (in Main Wiring Harness)

- * Refer to Applicable Standard Equipment Wiring Diagram
- *2 For Vehicles with Trailer Socket
- *3 For Vehicles with Seat Heating
- *4 Refer to Applicable Engine Wiring Diagram

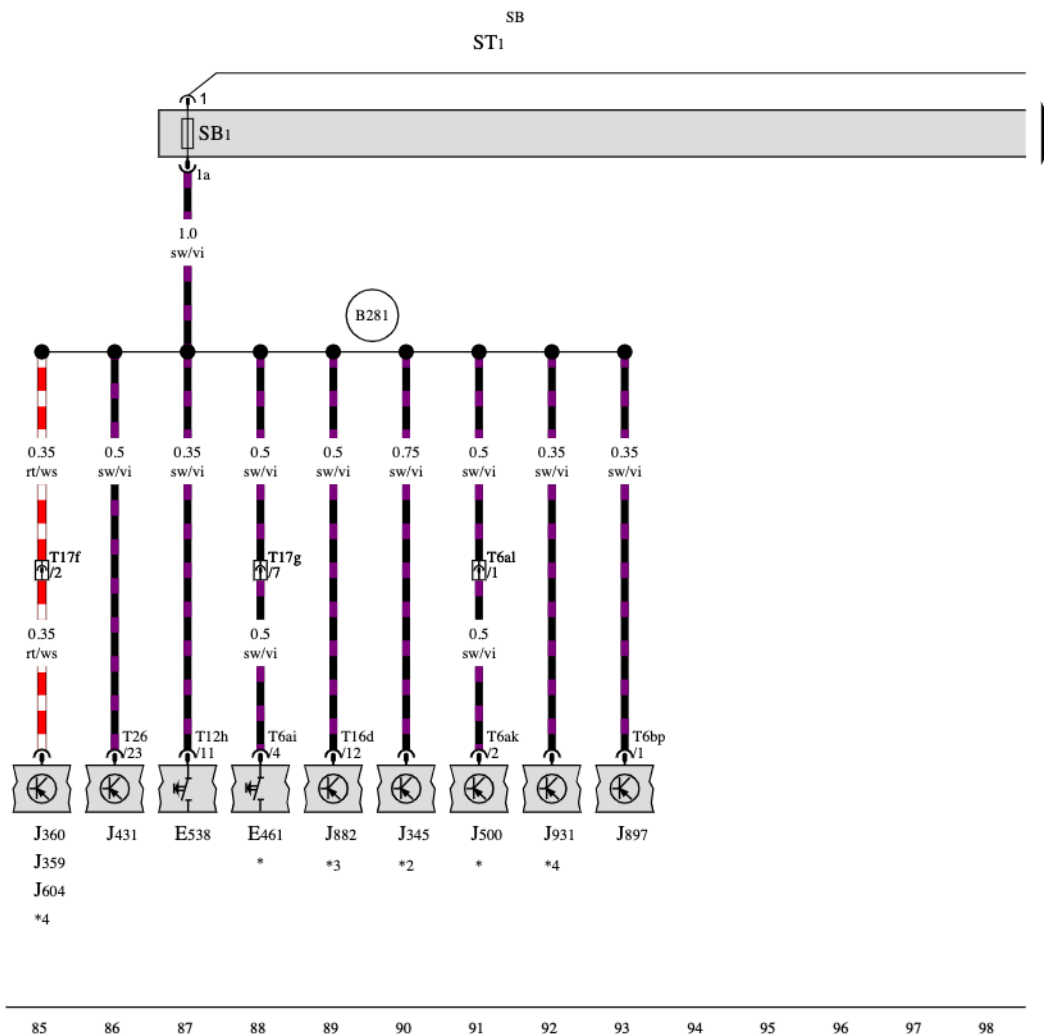

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

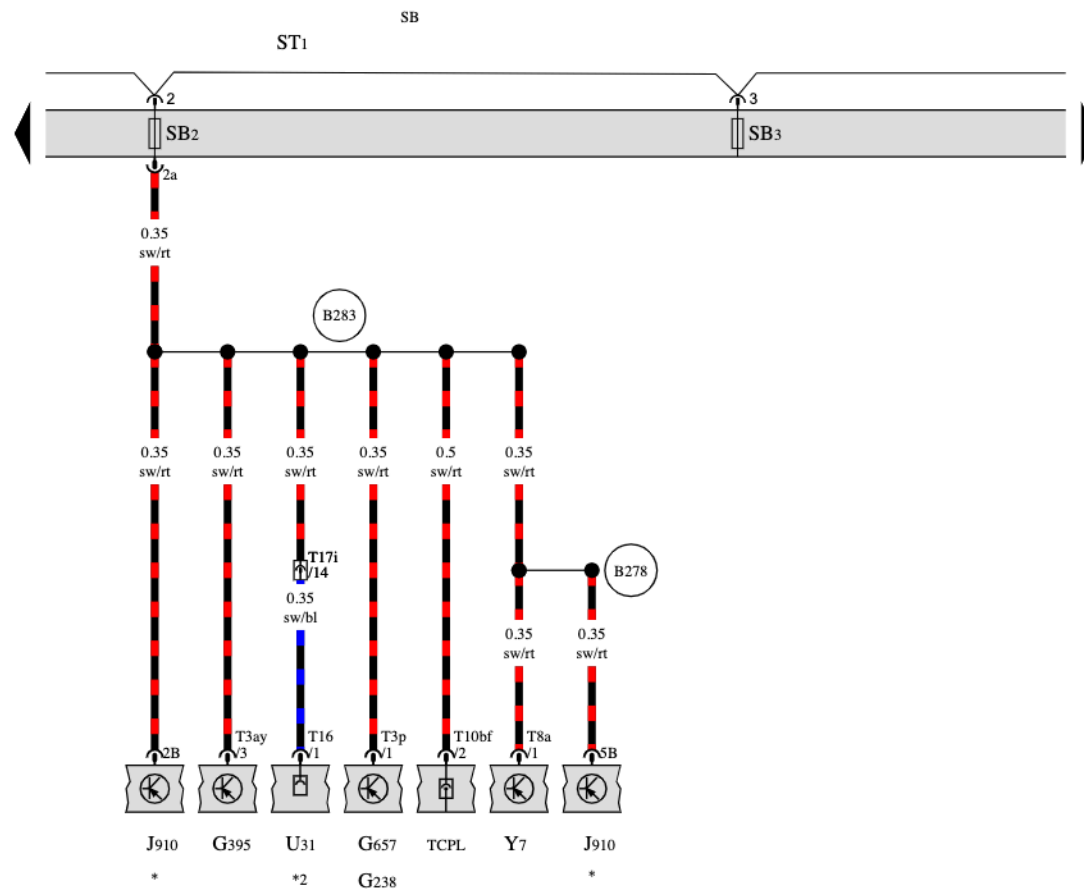

Fuse Panel B, Fuse Panel 1

- G238 Air Quality Sensor
- G395 A/C Pressure/Temperature Sensor
- G657 Humidity Sensor in Fresh Air Intake Duct
- J910 Automatic Dimming Interior Rearview Mirror Relay
- SB Fuse Panel B
- ST1 Fuse Panel 1, Black
- SB2 Fuse 2 (On Fuse Panel B)
- SB3 Fuse 3 (On Fuse Panel B)
- T3ay 3-Pin Connector
- T3p 3-Pin Connector
- T8a 8-Pin Connector
- T10bf 10-Pin Connector
- T16 16-Pin Connector
- T17i 17-Pin Connector, In the Left A-Pillar Connector Station, Black
- TCPL Coupling Point on Instrument Panel, Left
- U31 Diagnostic Connection, In the Luggage Compartment, Right Rear
- Y7 Automatic Dimming Interior Rearview Mirror

B278 Positive Connection 2 (15a) (in Main Wiring Harness)

B283 Positive Connection 7 (15a) (in Main Wiring Harness)

* Refer to Applicable Standard Equipment Wiring Diagram

*2 Diagnostic Connector




Audi

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

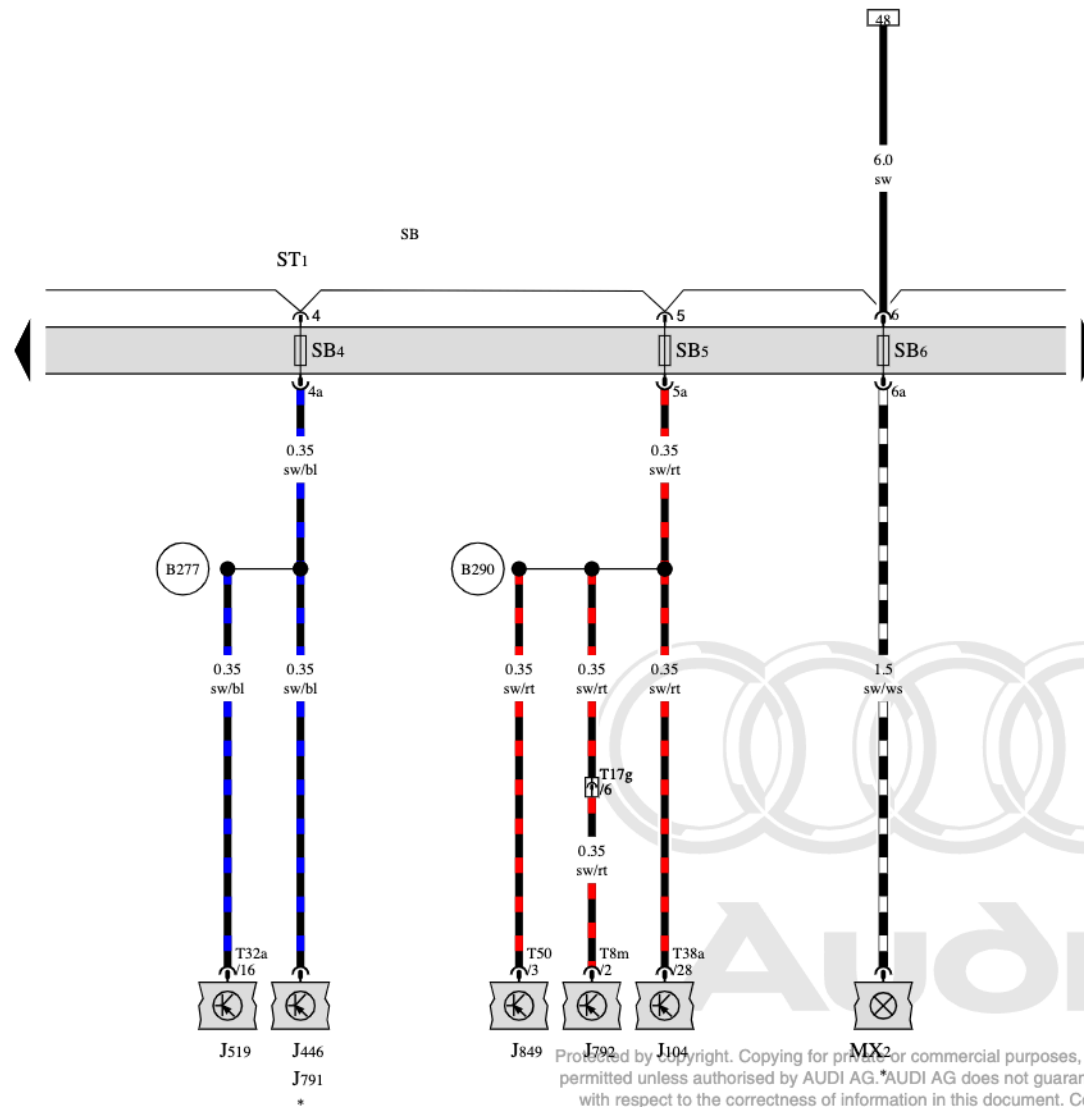

Fuse Panel B, Fuse Panel 1

- J104 ABS Control Module
- J446 Parking Aid Control Module
- J519 Vehicle Electrical System Control Module
- J791 Parallel Parking Assistance Control Module
- J792 Active Steering Control Module
- J849 Sensor Electronics Control Module
- MX2 Right Front Headlamp
- SB Fuse Panel B
- ST1 Fuse Panel 1, Black
- SB4 Fuse 4 (On Fuse Panel B)
- SB5 Fuse 5 (On Fuse Panel B)
- SB6 Fuse 6 (On Fuse Panel B)
- T8m 8-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station, Blue
- T32a 32-Pin Connector
- T38a 38-Pin Connector
- T50 50-Pin Connector

B277 Positive Connection 1 (15a) (in Main Wiring Harness)

B290 Positive Connection 14 (15a) (in Main Wiring Harness)

* Refer to Applicable Wiring Diagram

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink


Fuse Panel B, Fuse Panel 1

- J234 Airbag Control Module
- J428 Control Module for Adaptive Cruise Control
- J706 Seat Occupant Detection System Control Module
- J850 Control Module 2 for Adaptive Cruise Control
- SB Fuse Panel B
- ST1 Fuse Panel 1, Black
- SB7 Fuse 7 (On Fuse Panel B)
- SB8 Fuse 8 (On Fuse Panel B)
- T8k 8-Pin Connector
- T8l 8-Pin Connector
- T10e 10-Pin Connector, Under the Right Front Seat
- T100 100-Pin Connector

B280 Positive Connection 4 (15a) (in Main Wiring Harness)

B282 Positive Connection 6 (15a) (in Main Wiring Harness)

- * For USA Only
- *2 Refer to Applicable Airbag Wiring Diagram
- *3 For Vehicles with Adaptive Cruise Control (ACC)

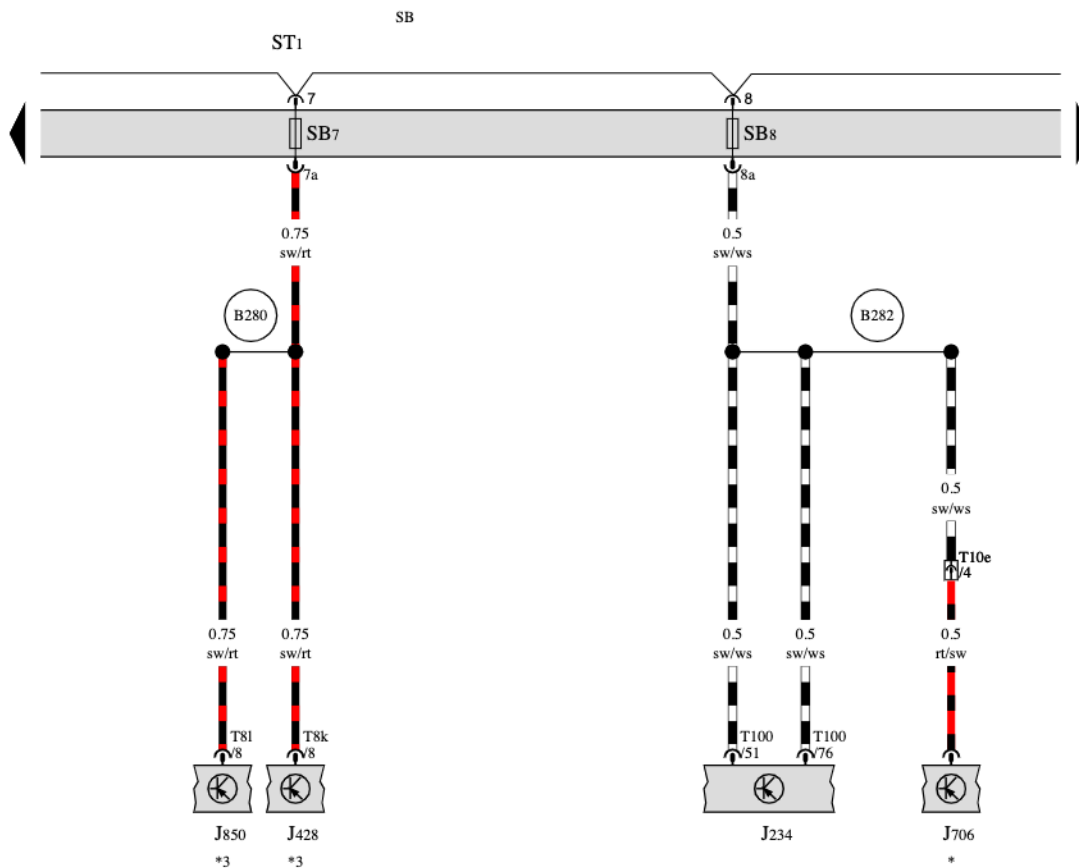

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Fuse Panel B, Fuse Panel 1

- J527 Steering Column Electronics Control Module
- MX1 Left Front Headlamp
- SB Fuse Panel B
- ST1 Fuse Panel 1, Black
- SA3 Fuse 3 (On Fuse Panel A)
- SB12 Fuse 12 (On Fuse Panel B)
- SA12 Fuse 12 (On Fuse Panel A)
- SA13 Fuse 13 (On Fuse Panel A)
- SB13 Fuse 13 (On Fuse Panel B)
- SB14 Fuse 14 (On Fuse Panel B)
- SB15 Fuse 15 (On Fuse Panel B)
- SB16 Fuse 16 (On Fuse Panel B)
- T2nb 2-Pin Connector, Left Plenum Chamber E-Box Connector Station, Black
- T14t 14-Pin Connector, Left Plenum Chamber E-Box Connector Station, Black
- T16e 16-Pin Connector
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, White
- T17f 17-Pin Connector, In the Left A-Pillar Connector Station, White
- T17i 17-Pin Connector, In the Left A-Pillar Connector Station, Black
- D51 Positive Connection 1 (15) (in Engine/Motor Compartment Wiring Harness)
- * Refer to Applicable Engine Wiring Diagram
- *2 Refer to Applicable Wiring Diagram
- *3 From May 2016

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

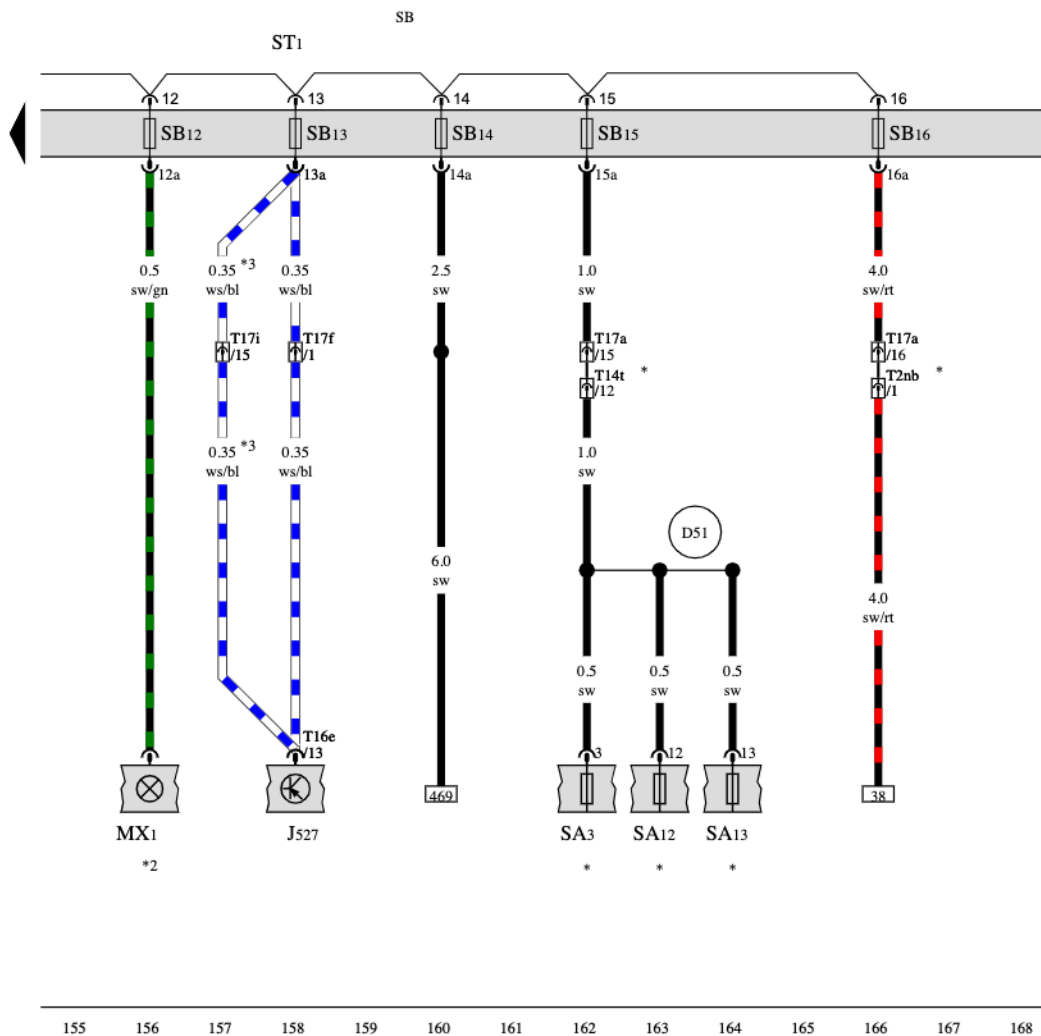


155 156 157 158 159 160 161 162 163 164 165 166 167 168

461.099130877

Fuse Panel B, Fuse Panel 2


- J849 Sensor Electronics Control Module
- J872 Front Passenger Multi-Contour Seat Control Module
- R86 Cellular Telephone Amplifier
- R126 Telephone Baseplate
- R199 External Audio Source Connection
- SB Fuse Panel B
- SB1 Fuse 1 (On Fuse Panel B)
- ST2 Fuse Panel 2, Brown
- SB2 Fuse 2 (On Fuse Panel B)
- SB3 Fuse 3 (On Fuse Panel B)
- SB4 Fuse 4 (On Fuse Panel B)
- SB5 Fuse 5 (On Fuse Panel B)
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat, Red
- T50 50-Pin Connector
- * Refer to Applicable Seat Adjustment Wiring Diagram
- *2 Refer to Applicable Wiring Diagram
- *3 For Vehicles with External Audio Source Connection - AUX-IN Connection

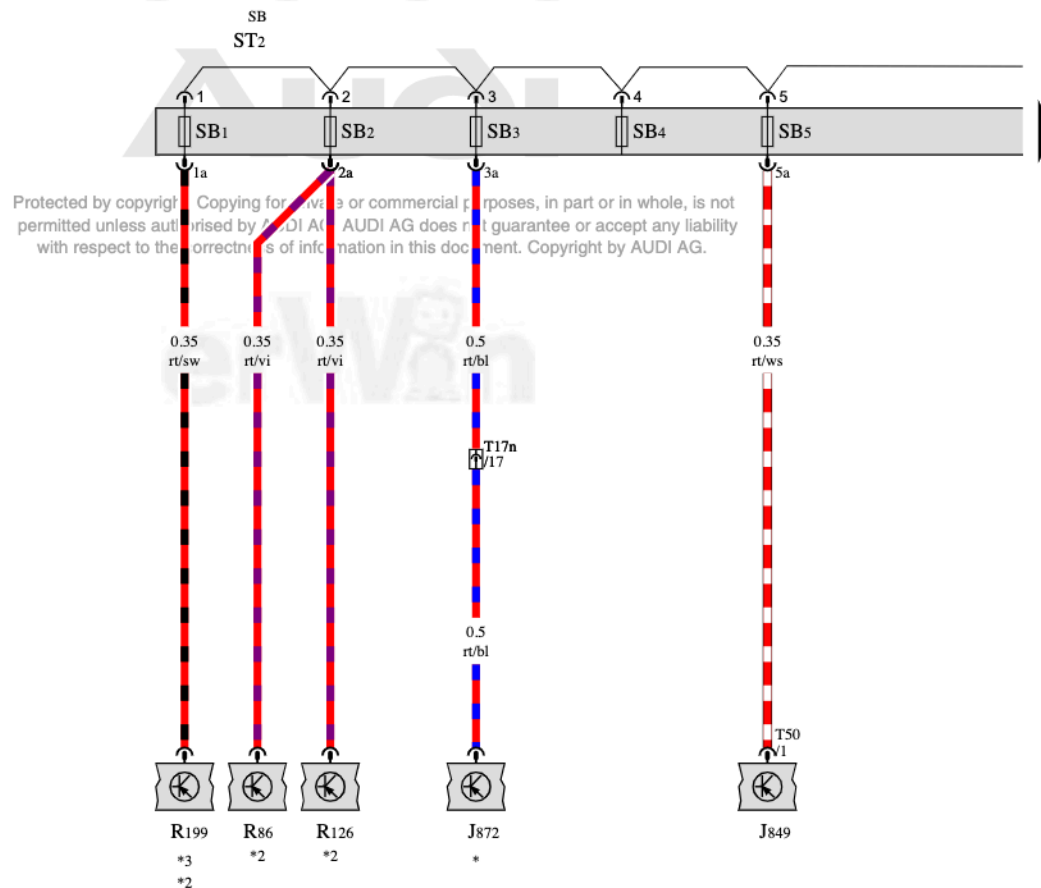

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink


Fuse Panel B, Fuse Panel 2

- E538 Electromechanical Parking Brake Button
- G273 Interior Monitoring Sensor
- G384 Vehicle Inclination Sensor
- G578 Anti-Theft Alarm System Sensor
- H12 Alarm Horn
- J528 Roof Electronics Control Module
- SB Fuse Panel B
- ST2 Fuse Panel 2, Brown
- SB6 Fuse 6 (On Fuse Panel B)
- SB7 Fuse 7 (On Fuse Panel B)
- SB8 Fuse 8 (On Fuse Panel B)
- T3n 3-Pin Connector
- T10ab 10-Pin Connector
- T12h 12-Pin Connector
- WX3 Front Roof Module
- B519 Central Locking/Anti-Theft Alarm System/Infrared Connection (30a) (in Main Wiring Harness)
- * For Vehicles with Interior Monitoring

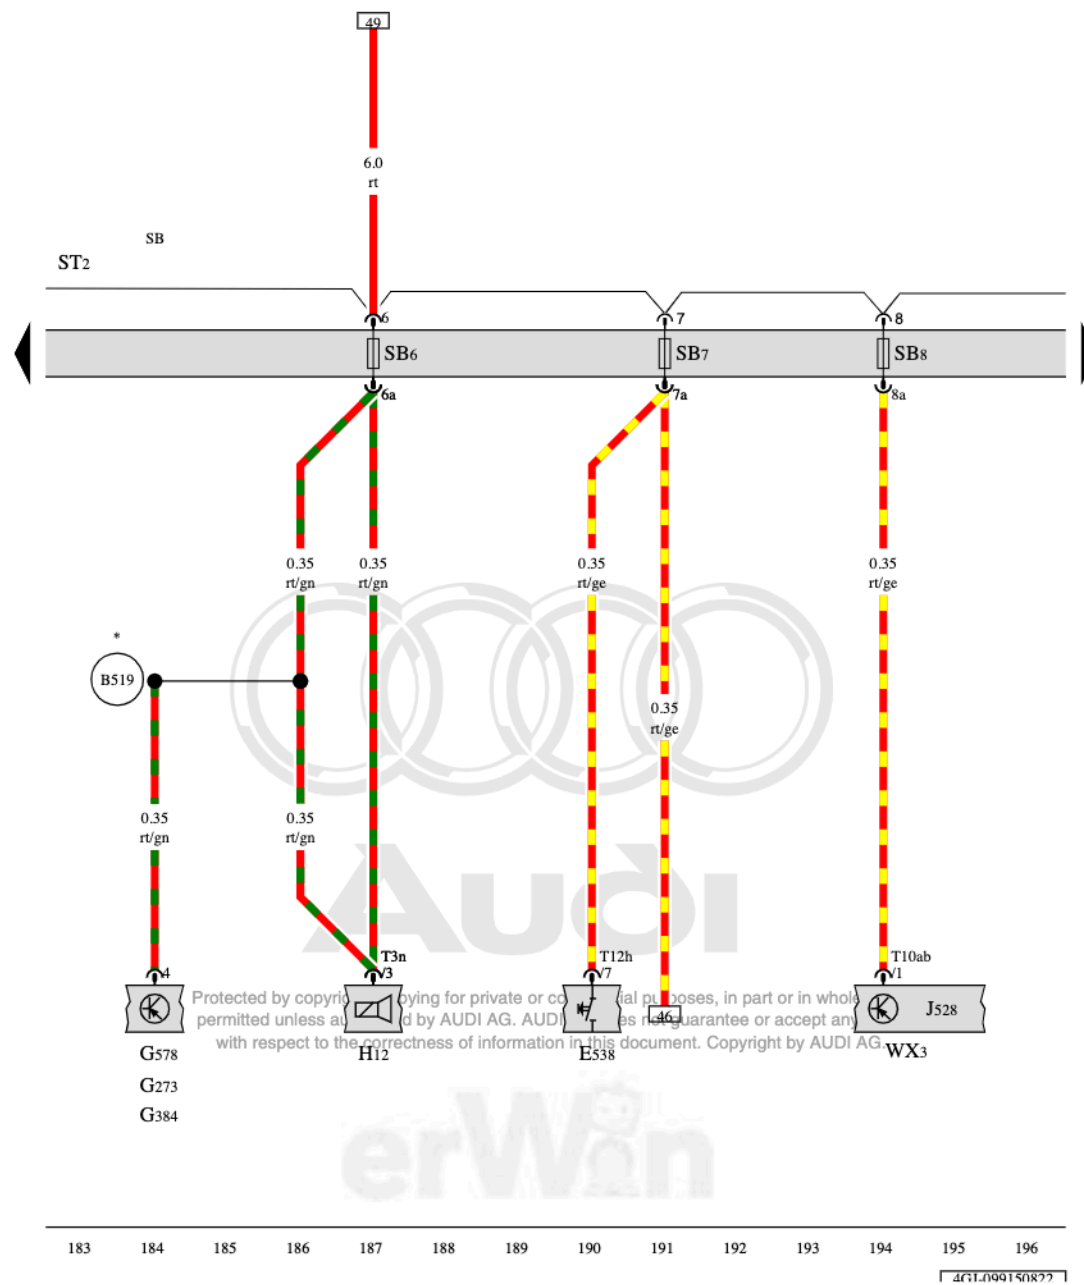

Fuse Panel B, Fuse Panel 2


- E176 Driver Seat Lumbar Support Adjustment Switch
- G397 Rain/Light Recognition Sensor
- J104 ABS Control Module
- J873 Driver Multi-Contour Seat Control Module
- SB Fuse Panel B
- ST2 Fuse Panel 2, Brown
- SB9 Fuse 9 (On Fuse Panel B)
- SB10 Fuse 10 (On Fuse Panel B)
- SB11 Fuse 11 (On Fuse Panel B)
- SB12 Fuse 12 (On Fuse Panel B)
- T3o 3-Pin Connector
- T4u 4-Pin Connector
- T6bc 6-Pin Connector
- T17m 17-Pin Connector, In the Coupling Point for the Left Front Seat, Red
- T38a 38-Pin Connector
- * Depending on Equipment
- *2 For Vehicles Without Adjustable Seats
- *3 Refer to Applicable Seat Adjustment Wiring Diagram

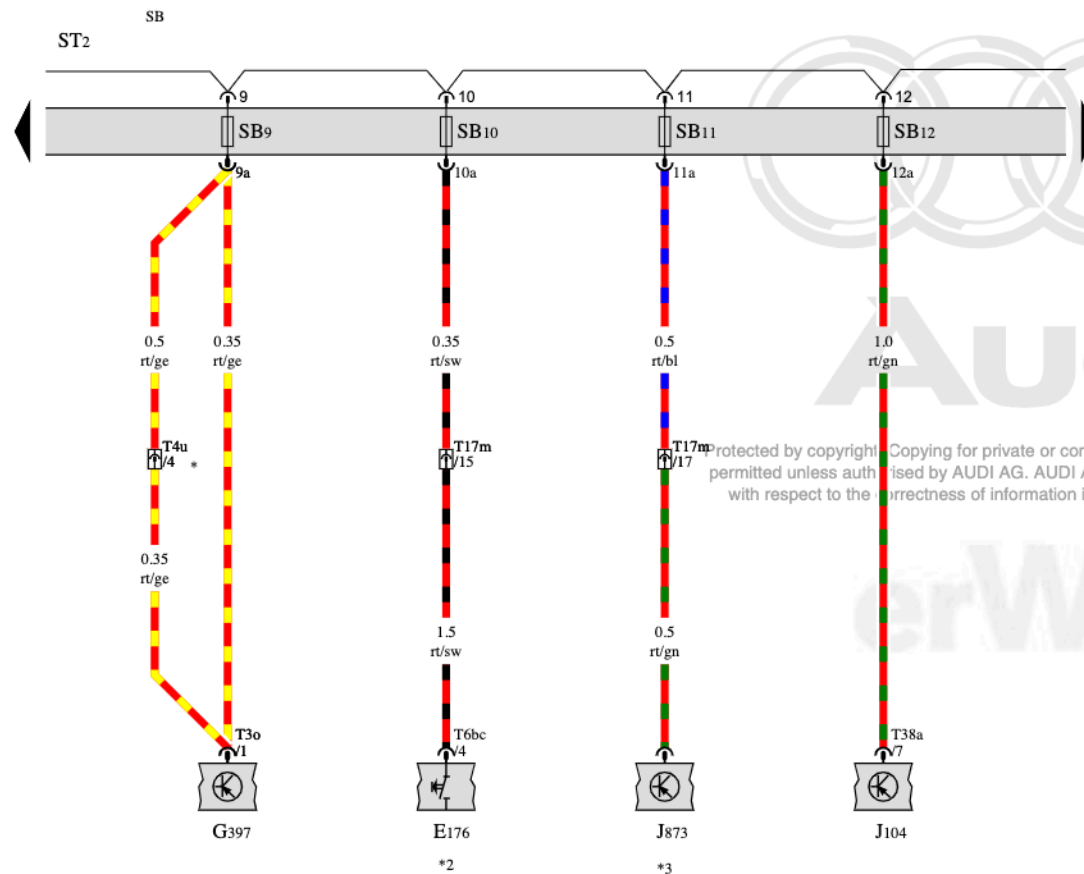

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink


Fuse Panel B, Fuse Panel 2

- J413 Horn Relay
- J519 Vehicle Electrical System Control Module
- J792 Active Steering Control Module
- SA Fuse Panel A
- SB Fuse Panel B
- ST2 Fuse Panel 2, Brown
- SB13 Fuse 13 (On Fuse Panel B)
- SB14 Fuse 14 (On Fuse Panel B)
- SB15 Fuse 15 (On Fuse Panel B)
- SB16 Fuse 16 (On Fuse Panel B)
- T5k 5-Pin Connector
- T6d 6-Pin Connector
- T14u 14-Pin Connector, Left Plenum Chamber E-Box Connector Station, Black
- T17b 17-Pin Connector, Left Plenum Chamber E-Box Connector Station
- T17c 17-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station, Blue
- B635 Positive Connection 3 (87) (in Main Wiring Harness)
- * Refer to Applicable Engine Wiring Diagram
- *2 For Vehicles with Seat Heating

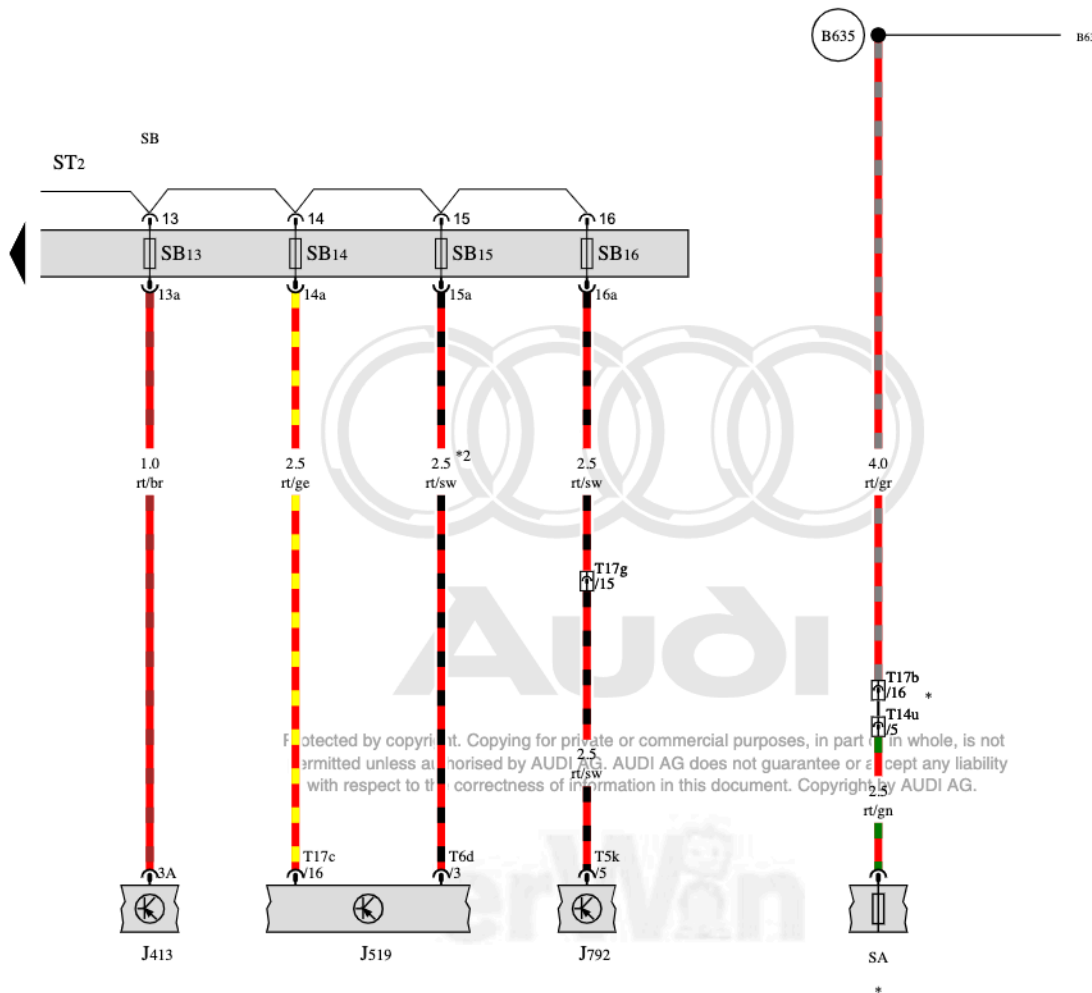

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Fuel Pump Relay, Fuse Panel B, Fuse Panel 3

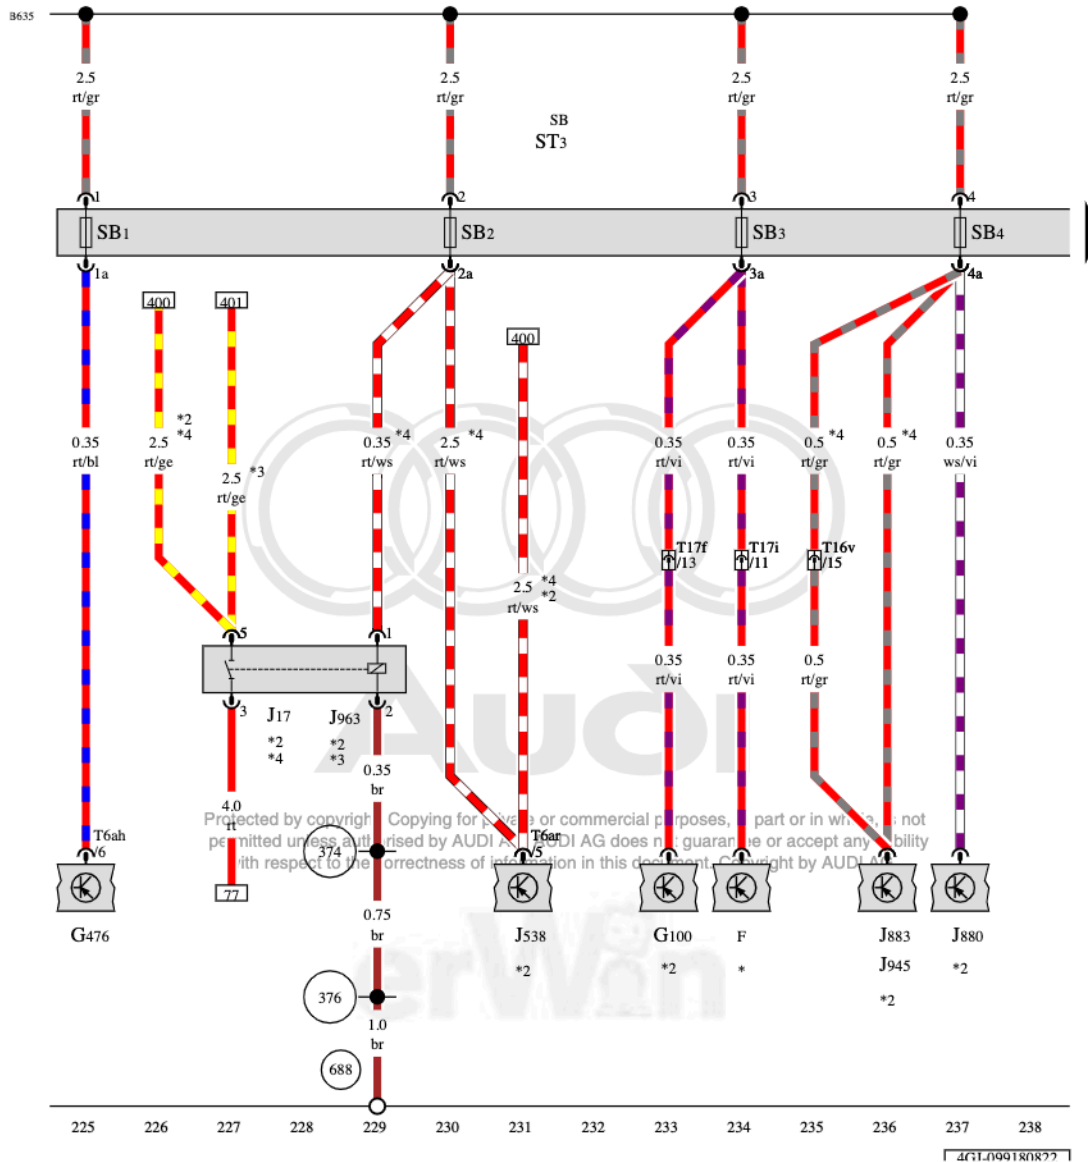


- F Brake Lamp Switch
- G100 Brake Pedal Position Sensor
- G476 Clutch Position Sensor
- J17 Fuel Pump Relay
- J538 Fuel Pump Control Module
- J880 Reducing Agent Metering System Control Module
- J883 Exhaust Door Control Unit
- J945 Exhaust Door Control Unit 2
- J963 Reducing Agent Metering System Relay
- SB Fuse Panel B
- SB1 Fuse 1 (On Fuse Panel B)
- SB2 Fuse 2 (On Fuse Panel B)
- SB3 Fuse 3 (On Fuse Panel B)
- ST3 Fuse Panel 3, Red
- SB4 Fuse 4 (On Fuse Panel B)
- T6ah 6-Pin Connector
- T6ar 6-Pin Connector
- T16v 16-Pin Connector, In the Luggage Compartment, Right Rear, Brown
- T17f 17-Pin Connector, In the Left A-Pillar Connector Station, White
- T17i 17-Pin Connector, In the Left A-Pillar Connector Station, Black
- 374 Ground Connection 9 (in Main Wiring Harness)
- 376 Ground Connection 11 (in Main Wiring Harness)
- 688 Ground Connection 2 on Center Tunnel
- B635 Positive Connection 3 (87) (in Main Wiring Harness)
- * Refer to Applicable Standard Equipment Wiring Diagram
- *2 Refer to Applicable Engine Wiring Diagram
- *3 For Vehicles with Reducing Agent Metering System
- *4 Depending on Equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Fuse Panel B, Fuse Panel 3

- J104 ABS Control Module
- J386 Driver Door Control Module
- J388 Left Rear Door Control Module
- J400 Wiper Motor Control Module
- J519 Vehicle Electrical System Control Module
- SB Fuse Panel B
- ST3 Fuse Panel 3, Red
- SB5 Fuse 5 (On Fuse Panel B)
- SB6 Fuse 6 (On Fuse Panel B)
- SB7 Fuse 7 (On Fuse Panel B)
- SB8 Fuse 8 (On Fuse Panel B)
- SB9 Fuse 9 (On Fuse Panel B)
- T4t 4-Pin Connector
- T17d 17-Pin Connector
- T23a 23-Pin Connector, On the Left A-Pillar, Black
- T27c 27-Pin Connector, On the Left B-Pillar
- T38a 38-Pin Connector
- * Refer to Applicable Convenience System Wiring Diagram

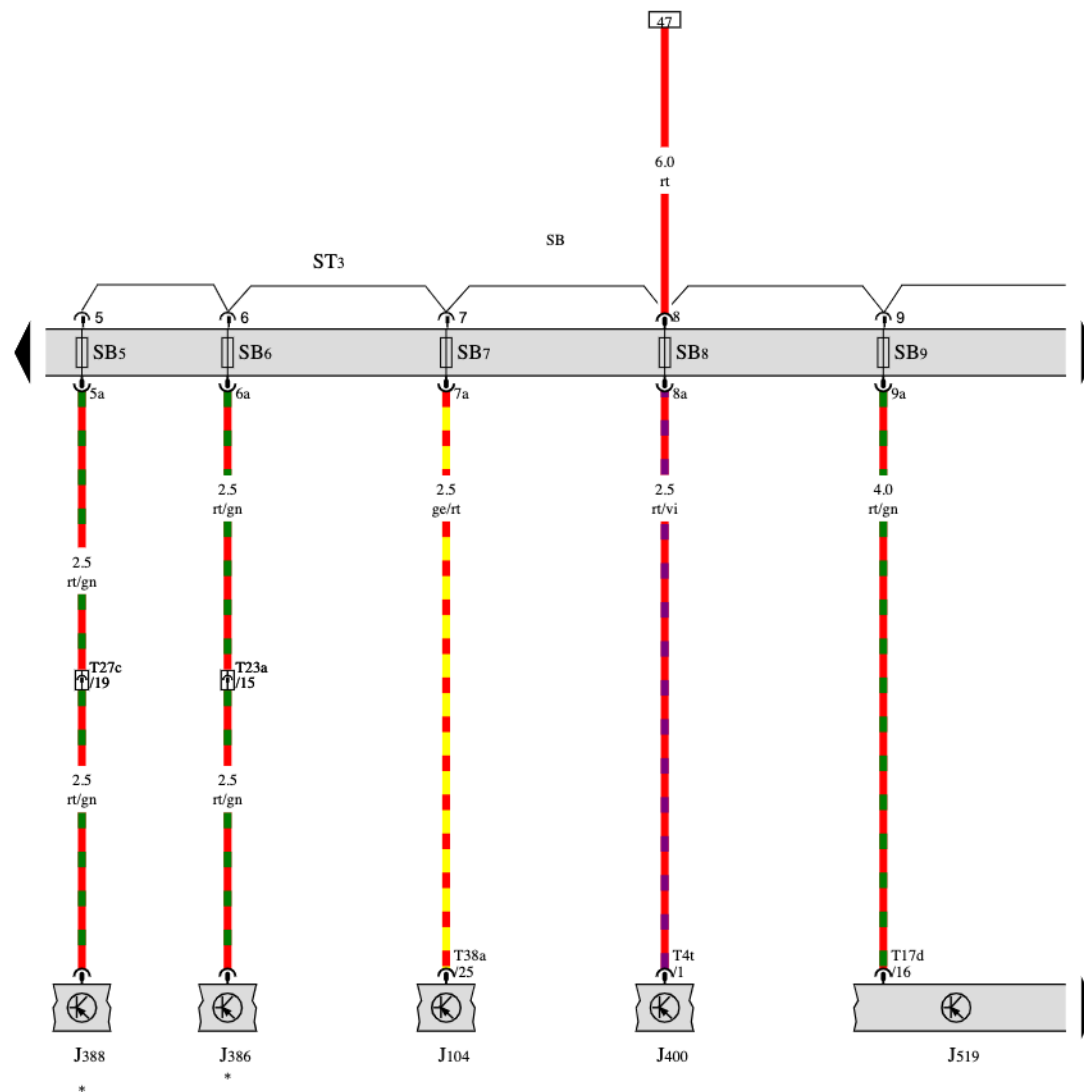


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

239 240 241 242 243 244 245 246 247 248 249 250 251 252

461.099190877

Fuse Panel B, Fuse Panel 3

- J519 Vehicle Electrical System Control Module
- SB Fuse Panel B
- ST3 Fuse Panel 3, Red
- SB10 Fuse 10 (On Fuse Panel B)
- SB11 Fuse 11 (On Fuse Panel B)
- SB12 Fuse 12 (On Fuse Panel B)
- T6g 6-Pin Connector
- T10b 10-Pin Connector
- T17d 17-Pin Connector
- T17e 17-Pin Connector
- V1 Sunroof Motor
- * Sedan
- *2 Avant

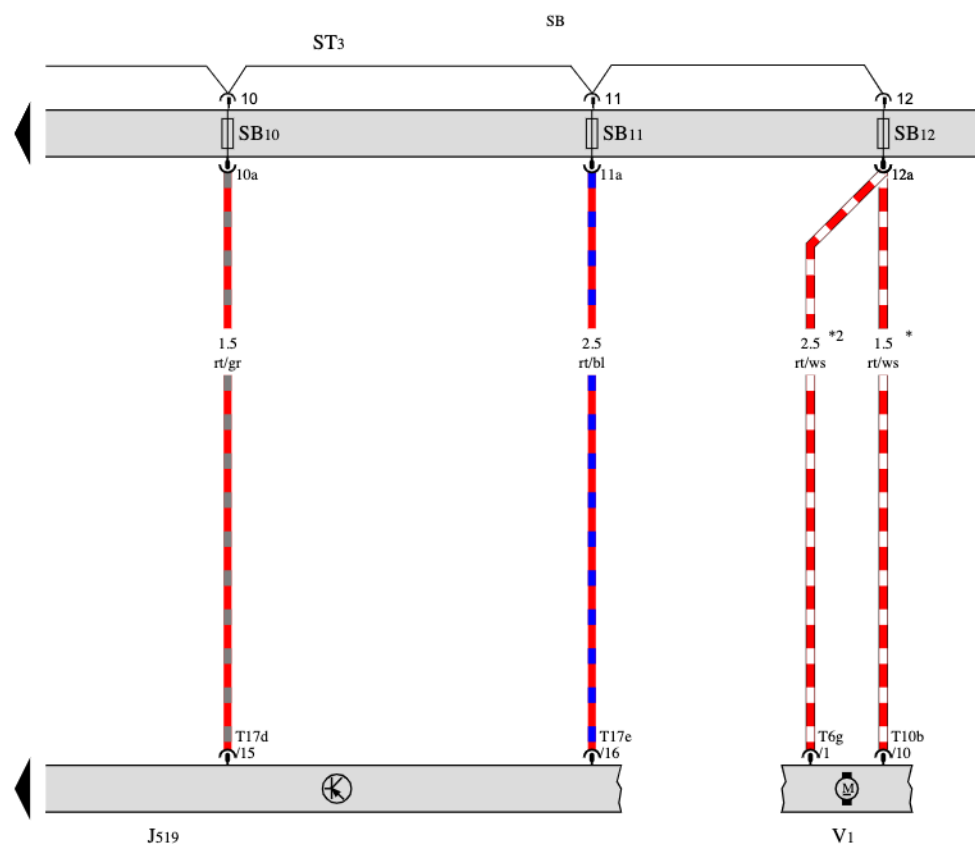


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


erWin

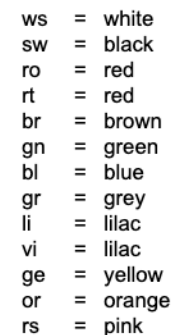

J676	Chip Card Reader Control Module
J685	Front Information Display Control Head
R41	CD Changer
SC	Fuse Panel C
ST1	Fuse Panel 1, Red
SC1	Fuse 1 (On Fuse Panel C)
SC2	Fuse 2 (On Fuse Panel C)
SC3	Fuse 3 (On Fuse Panel C)
SC4	Fuse 4 (On Fuse Panel C)
T8ag	8-Pin Connector
T10bk	10-Pin Connector
T17o	17-Pin Connector, In the Connector Station, Right A-Pillar, Black
A168	Positive Connection 4 (30a) (in Instrument Panel Wiring Harness)
*	For Vehicles with Start/Stop System
*2	For Vehicles with RMC Radio System
*3	Refer to Applicable Wiring Diagram

Fuse Panel C, Fuse Panel 1

- SC Fuse Panel C
- ST1 Fuse Panel 1, Red
- SC5 Fuse 5 (On Fuse Panel C)
- SC6 Fuse 6 (On Fuse Panel C)
- SC7 Fuse 7 (On Fuse Panel C)

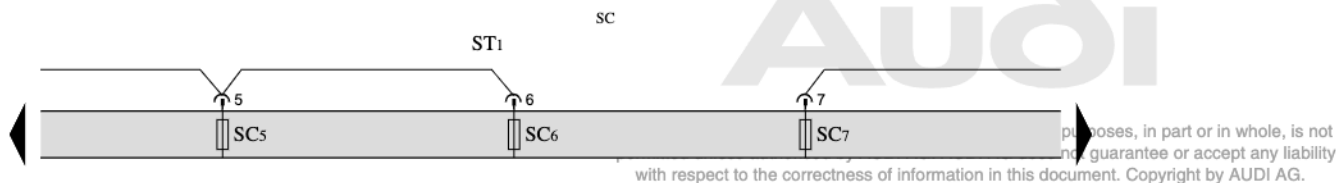


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

281 282 283 284 285 286 287 288 289 290 291 292 293 294

1 4 6 1 2 1 0 9 9 7 7 0 8 2 7 7

Fuse Panel C, Fuse Panel 1

SC	Fuse Panel C
ST1	Fuse Panel 1, Red
SC8	Fuse 8 (On Fuse Panel C)
SC9	Fuse 9 (On Fuse Panel C)
SC10	Fuse 10 (On Fuse Panel C)
SC11	Fuse 11 (On Fuse Panel C)
SC12	Fuse 12 (On Fuse Panel C)

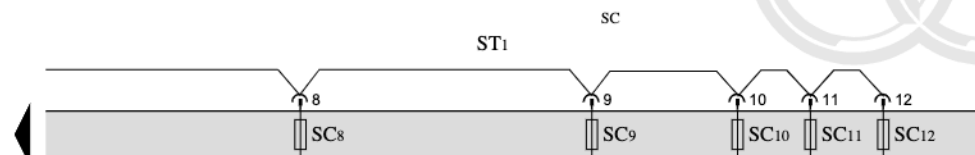


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Fuse Panel C, Fuse Panel 2

- D2 Anti-Theft Immobilizer Reader Coil
- J126 Fresh Air Blower Control Module
- J255 Climatronic Control Module
- J764 Electronic Steering Column Lock Control Module
- SC Fuse Panel C, Instrument Panel Fuse Panel, Left
- SC1 Fuse 1 (On Fuse Panel C)
- SC2 Fuse 2 (On Fuse Panel C)
- ST2 Fuse Panel 2, Brown
- SC3 Fuse 3 (On Fuse Panel C)
- SC4 Fuse 4 (On Fuse Panel C)
- SC5 Fuse 5 (On Fuse Panel C)
- T4am 4-Pin Connector
- T4cb 4-Pin Connector
- T6p 6-Pin Connector
- T16 16-Pin Connector
- T20c 20-Pin Connector
- U31 Diagnostic Connection, In the Luggage Compartment, Right Rear
- * Diagnostic Connector
- *2 For Vehicles with 400 W Voltage Stabilizer

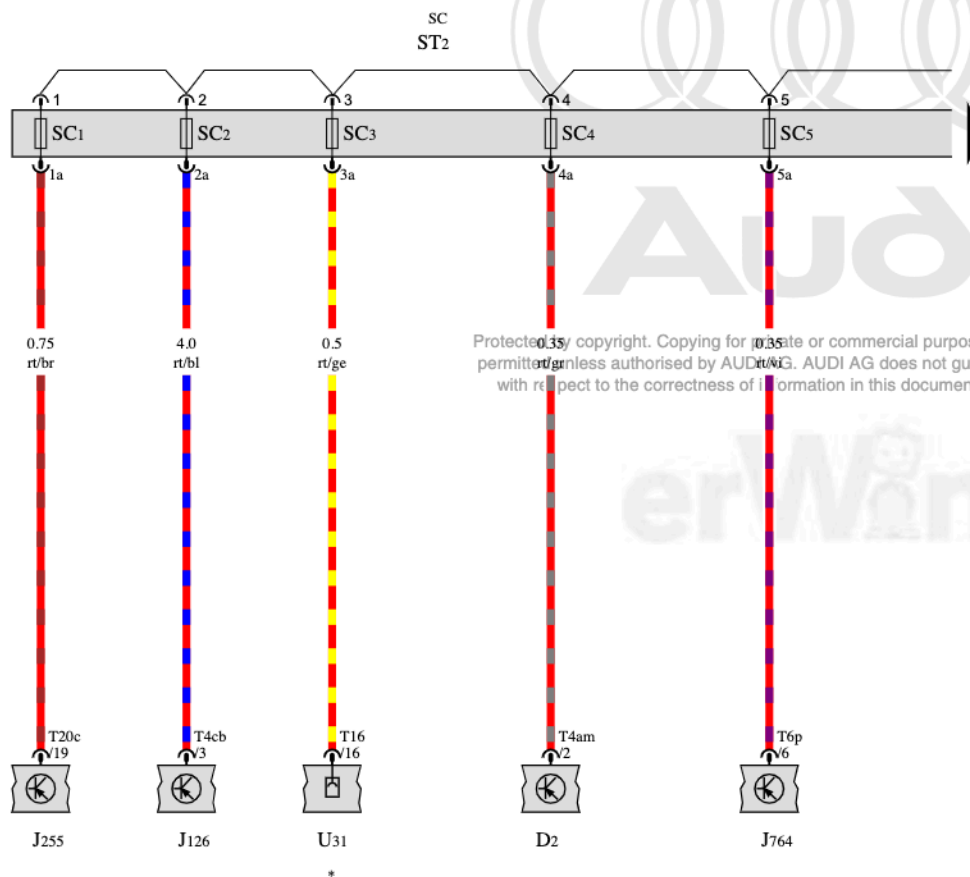

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

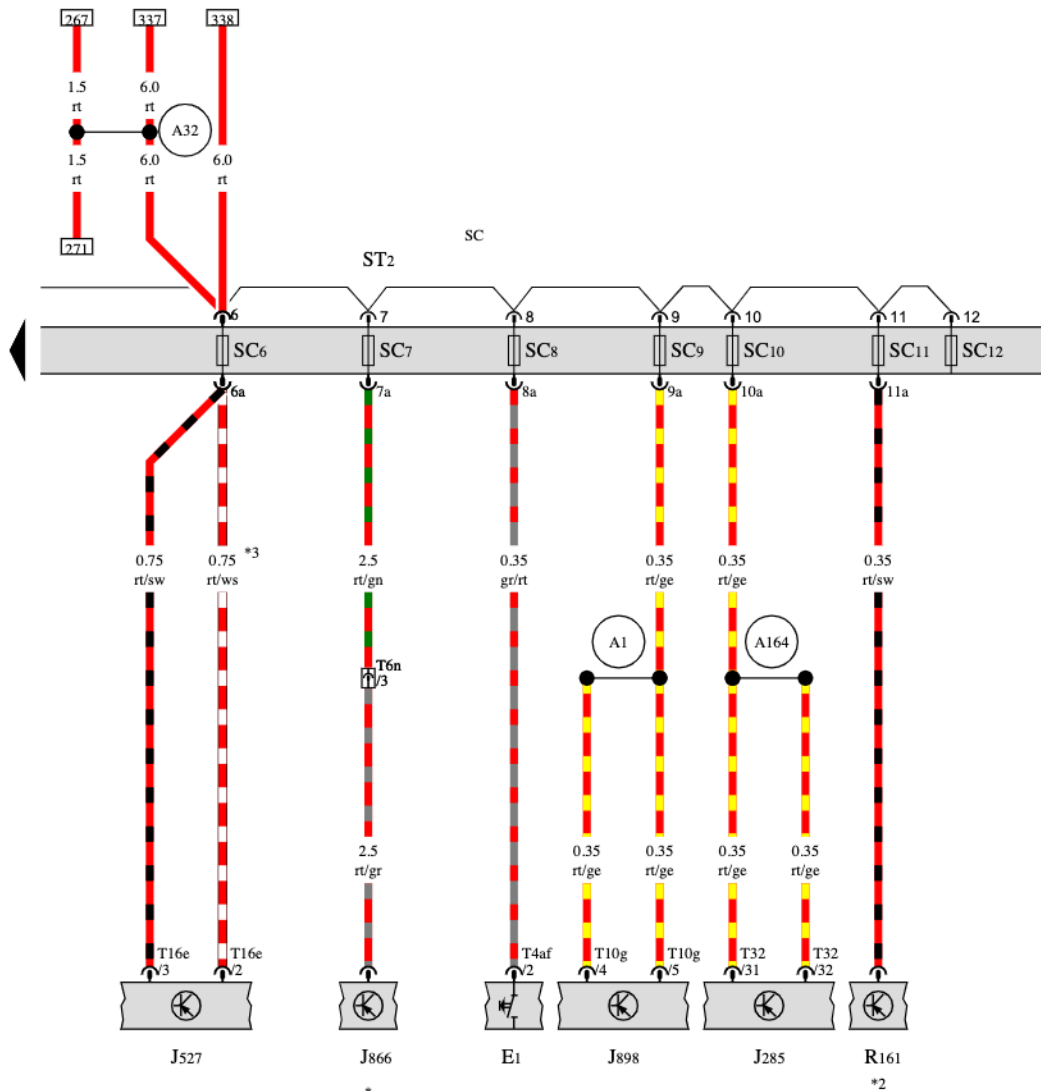

Fuse Panel C, Fuse Panel 2

- E1 Light Switch
- J285 Instrument Cluster Control Module
- J527 Steering Column Electronics Control Module
- J866 Power Adjustable Steering Column Control Module
- J898 Windshield Projection Head Up Display Control Module
- R161 DVD Changer
- SC Fuse Panel C, Instrument Panel Fuse Panel, Left
- ST2 Fuse Panel 2, Brown
- SC6 Fuse 6 (On Fuse Panel C)
- SC7 Fuse 7 (On Fuse Panel C)
- SC8 Fuse 8 (On Fuse Panel C)
- SC9 Fuse 9 (On Fuse Panel C)
- SC10 Fuse 10 (On Fuse Panel C)
- SC11 Fuse 11 (On Fuse Panel C)
- SC12 Fuse 12 (On Fuse Panel C)
- T4af 4-Pin Connector
- T6n 6-Pin Connector, Behind the Steering Column Trim Panel
- T10g 10-Pin Connector
- T16e 16-Pin Connector
- T32 32-Pin Connector
- A1 Positive Connection 30a (in Instrument Panel Wiring Harness)
- A32 Positive Connection (30) (in Instrument Panel Wiring Harness)
- A164 Positive Connection 2 (30a) (in Instrument Panel Wiring Harness)
- * Refer to Applicable Wiring Diagram
- *2 Refer to the Applicable Multimedia System Wiring Diagram
- *3 For Vehicles with Heated Steering Wheel

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

323 324 325 326 327 328 329 330 331 332 333 334 335 336

461.099750877

Positive Connection 2 (30a) (in Main Wiring Harness)

- J271 Motronic Engine Control Module Power Supply Relay
- J317 Terminal 30 Power Supply Relay
- J757 Engine Component Power Supply Relay
- S44 Driver Power Seat Adjustment Circuit Breaker 1
- S123 ABS Control Module Fuse 1

500 Terminal 30 Threaded Connection 1 (On Relay Panel)

508 Terminal 30 Threaded Connection (On E-Box)

B316 Positive Connection 2 (30a) (in Main Wiring Harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Audi AG


* Refer to Applicable Wiring Diagram for ABS

*2 Refer to Applicable Seat Adjustment Wiring Diagram


*3 Relay Panel Under the Instrument Panel, Left

*4 Threaded Connection in the Plenum Chamber E-Box

*5 Refer to Applicable Engine Wiring Diagram

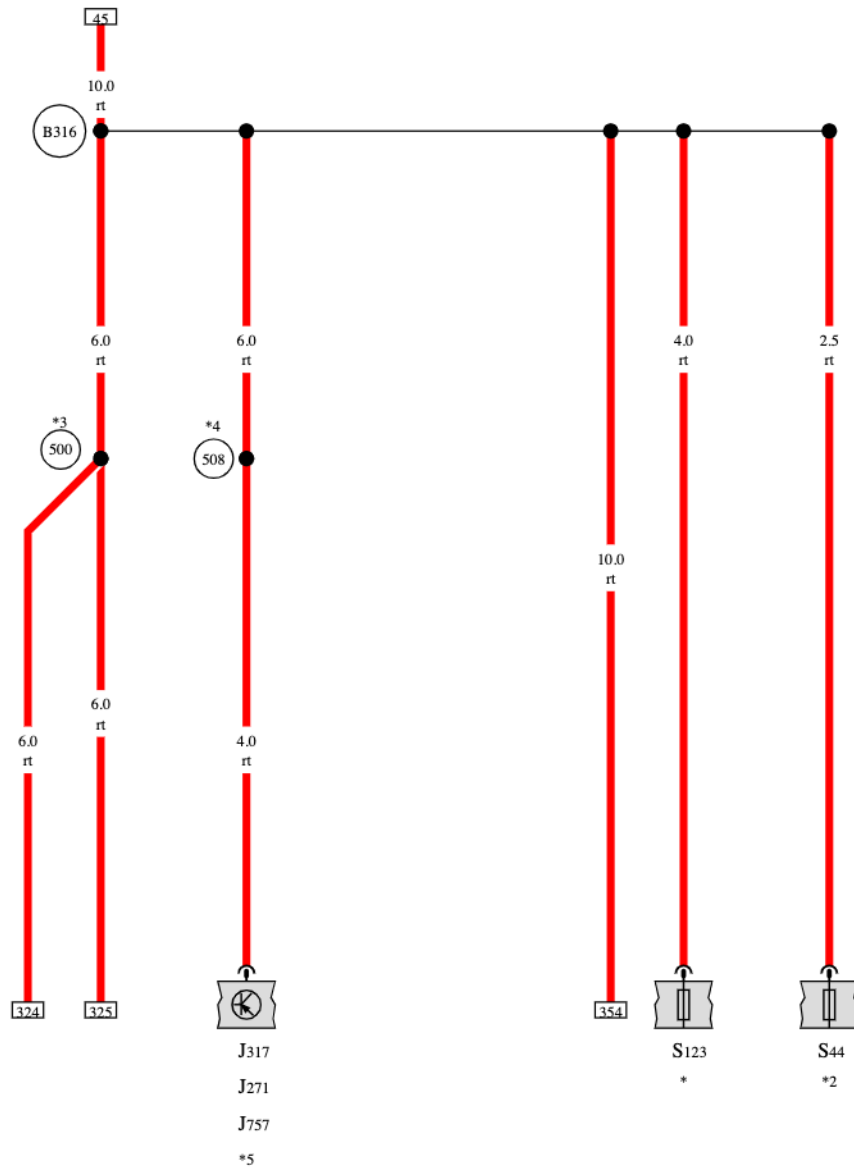

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

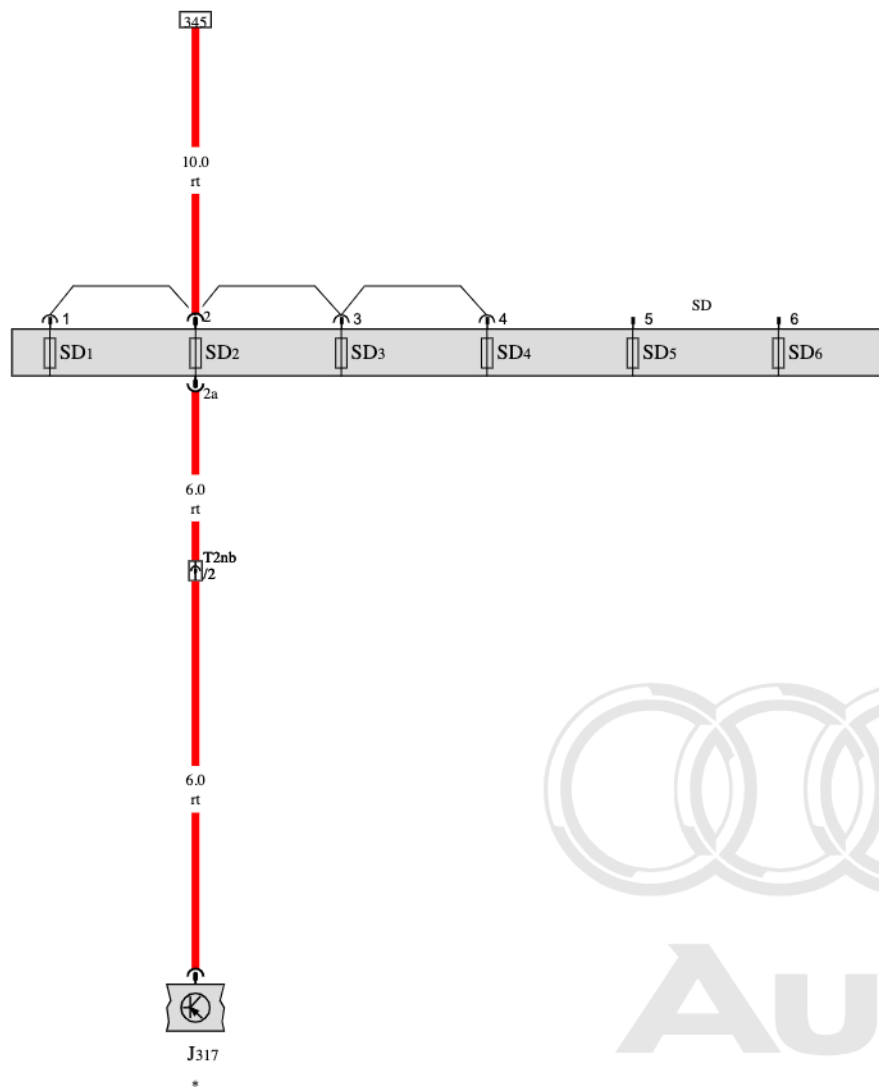

Fuse 2 (On Fuse Panel D)

- J317 Terminal 30 Power Supply Relay
- SD Fuse Panel D
- SD1 Fuse 1 (On Fuse Panel D)
- SD2 Fuse 2 (On Fuse Panel D)
- SD3 Fuse 3 (On Fuse Panel D)
- SD4 Fuse 4 (On Fuse Panel D)
- SD5 Fuse 5 (On Fuse Panel D)
- SD6 Fuse 6 (On Fuse Panel D)
- T2nb 2-Pin Connector, Left Plenum Chamber E-Box Connector Station, Black
- * Refer to Applicable Engine Wiring Diagram




- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee the accuracy of the information with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse Panel F, Fuse Panel 1

- E409 Left Rear Seat Massage Button
- E410 Right Rear Seat Massage Button
- J345 Towing Recognition Control Module
- J387 Front Passenger Door Control Module
- J540 Electromechanical Parking Brake Control Module
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- SF1 Fuse 1 (On Fuse Panel F)
- ST1 Fuse Panel 1, Black
- SF2 Fuse 2 (On Fuse Panel F)
- SF3 Fuse 3 (On Fuse Panel F)
- SF4 Fuse 4 (On Fuse Panel F)
- SF5 Fuse 5 (On Fuse Panel F)
- SF6 Fuse 6 (On Fuse Panel F)
- T6ce 6-Pin Connector
- T23b 23-Pin Connector, On the Right A-Pillar, Black
- T30a 30-Pin Connector
- U13 Converter with Socket, 12 V-230 V
- Z105 Cupholder with Heating and Cooling Element
- * Refer to Applicable Convenience System Wiring Diagram
- *2 For Vehicles with Trailer Socket
- *3 For Vehicles with China Equipment
- *4 Refer to Applicable Wiring Diagram

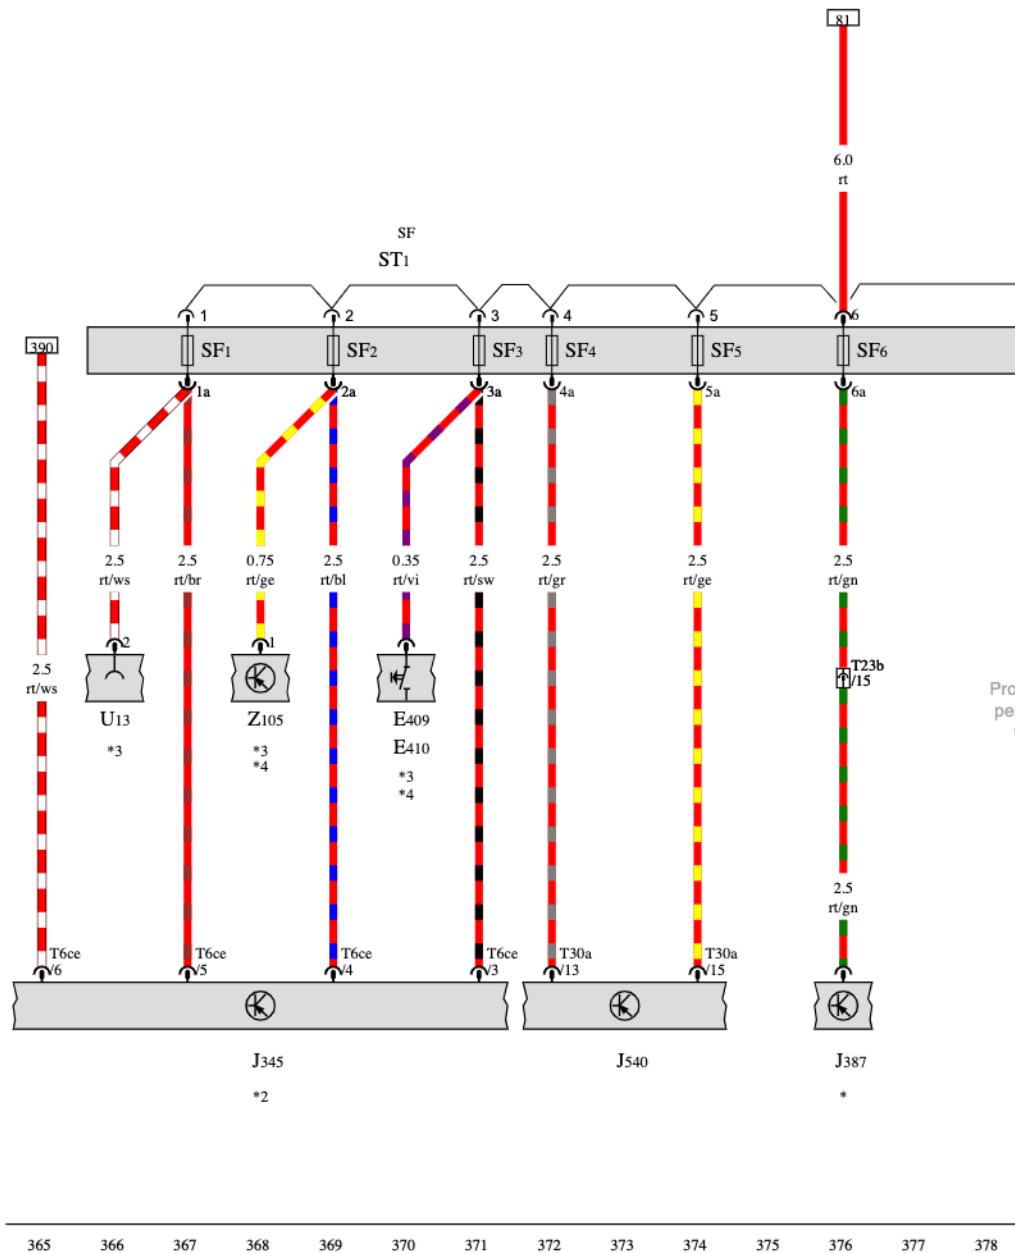

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Telematics Interface Control Module, Telephone Interface, Fuse Panel F, Fuse Panel 1


- E265 Rear A/C Display Control Head
- J393 Comfort System Central Control Module
- J799 Right Front Seat Ventilation Control Module
- J882 Seat Heating Control Module
- J1221 Telematics Interface Control Module
- RX8 Telephone Interface
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- ST1 Fuse Panel 1, Black
- SF7 Fuse 7 (On Fuse Panel F)
- SF8 Fuse 8 (On Fuse Panel F)
- SF9 Fuse 9 (On Fuse Panel F)
- SF10 Fuse 10 (On Fuse Panel F)
- SF11 Fuse 11 (On Fuse Panel F)
- SF12 Fuse 12 (On Fuse Panel F)
- T3r 3-Pin Connector
- T6i 6-Pin Connector, In the Coupling Point for the Right Front Seat
- T10bp 10-Pin Connector, Black
- T12o 12-Pin Connector, In the Luggage Compartment, Right
- T16d 16-Pin Connector
- T17s 17-Pin Connector
- T20n 20-Pin Connector, Brown

B304 Positive Connection 8 (30) (in Main Wiring Harness)

B317 Positive Connection 3 (30a) (in Main Wiring Harness)

- * Climate Control, Basic Climatronic
- *2 Climate Control, Comfort Climatronic
- *3 For Vehicles with Special Functions Interface
- *4 For Vehicles with Seat Ventilation
- *5 From July 2017
- *6 For Vehicles with Hybrid Drive
- *7 Refer to Applicable Vehicle Positioning System Wiring Diagram

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

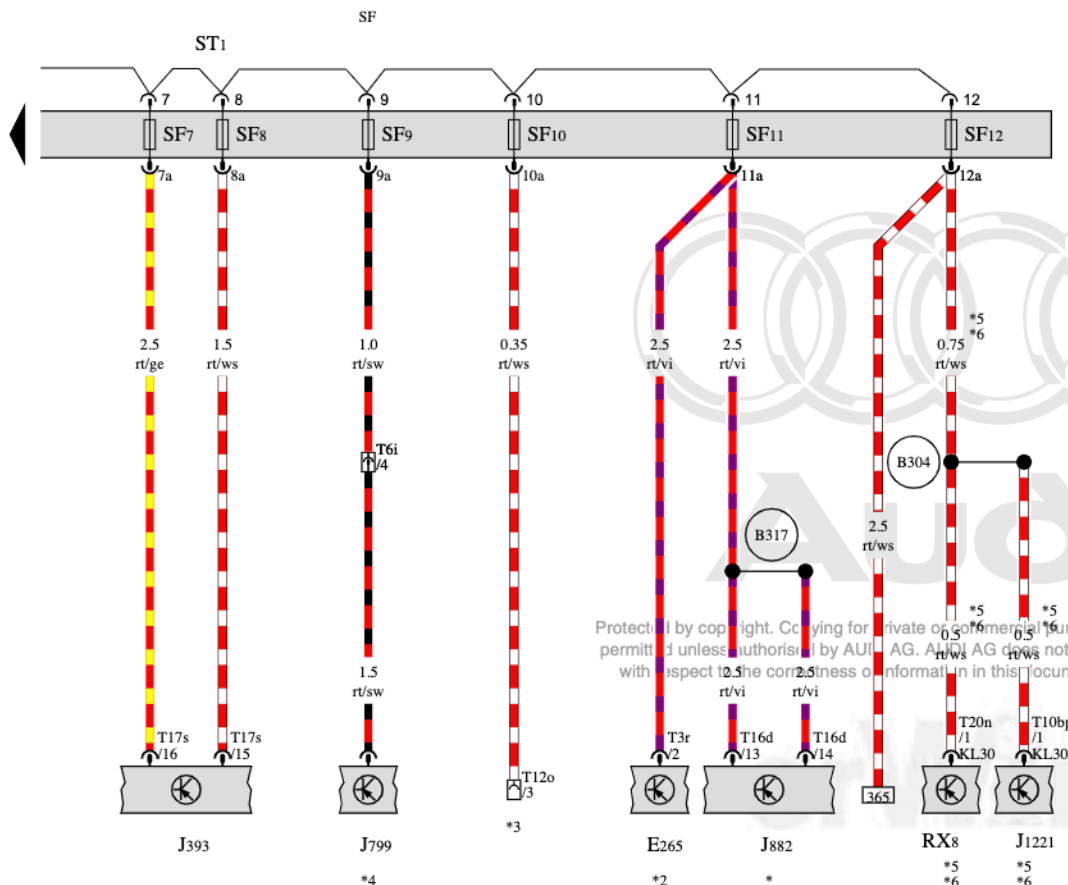

379 380 381 382 383 384 385 386 387 388 389 390 391 392

461.199790877


Fuse Panel F, Fuse Panel 2

- J854 Left Front Seat Belt Tensioner Control Module
- J855 Right Front Seat Belt Tensioner Control Module
- J880 Reducing Agent Metering System Control Module
- J931 Assembly Mount Control Module
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- SF1 Fuse 1 (On Fuse Panel F)
- SF2 Fuse 2 (On Fuse Panel F)
- ST2 Fuse Panel 2, Red
- SF3 Fuse 3 (On Fuse Panel F)
- SF4 Fuse 4 (On Fuse Panel F)
- T4ac 4-Pin Connector
- T4x 4-Pin Connector
- T8an 8-Pin Connector

B275 Positive Connection (87) (in Main Wiring Harness)


B321 Positive Connection 7 (30a) (in Main Wiring Harness)

- * Refer to Applicable Airbag Wiring Diagram
- *2 For Vehicles with Reducing Agent Metering System
- *3 Refer to Applicable Engine Wiring Diagram
- *4 Depending on Equipment

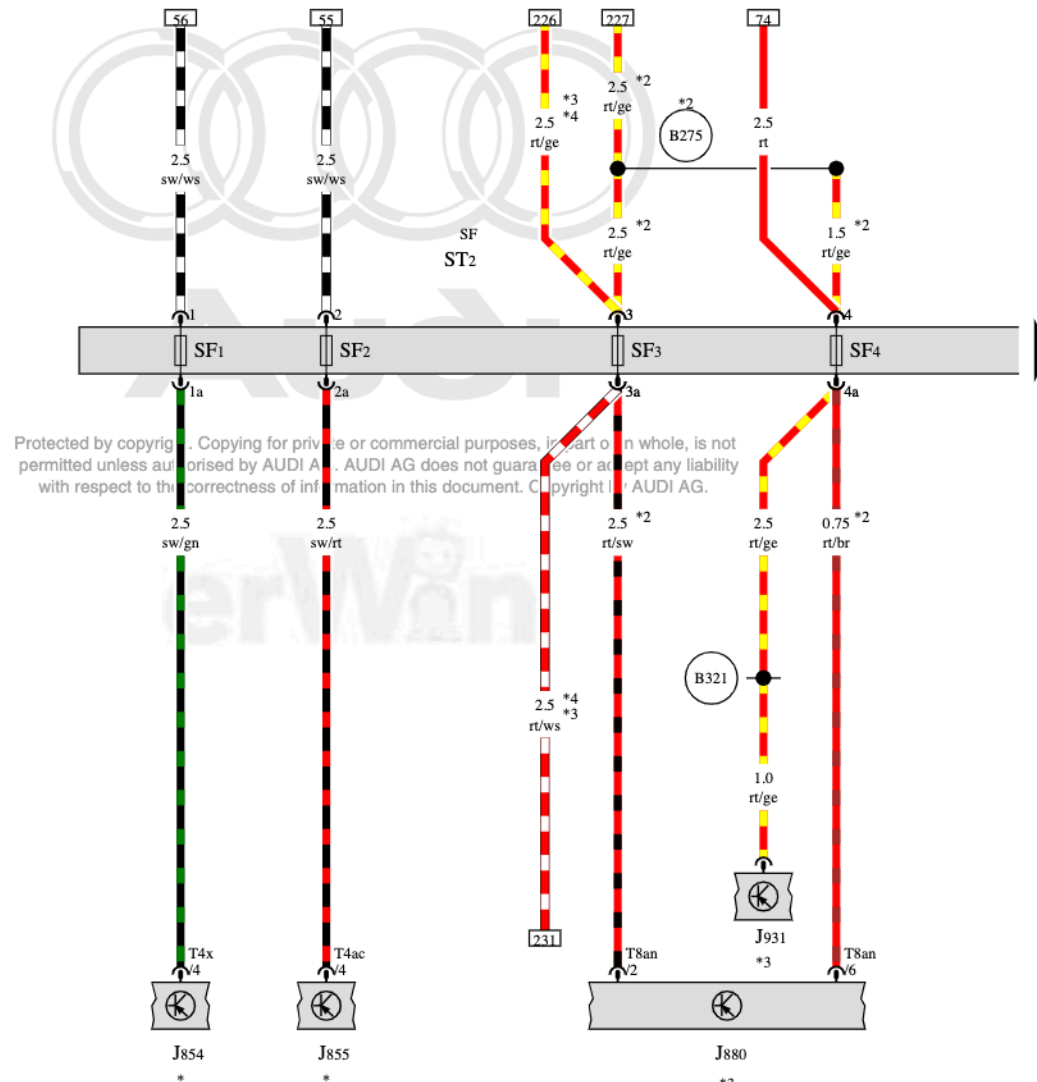

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink


Power Rear Lid Opening Control Module, Fuse Panel F, Fuse Panel 2

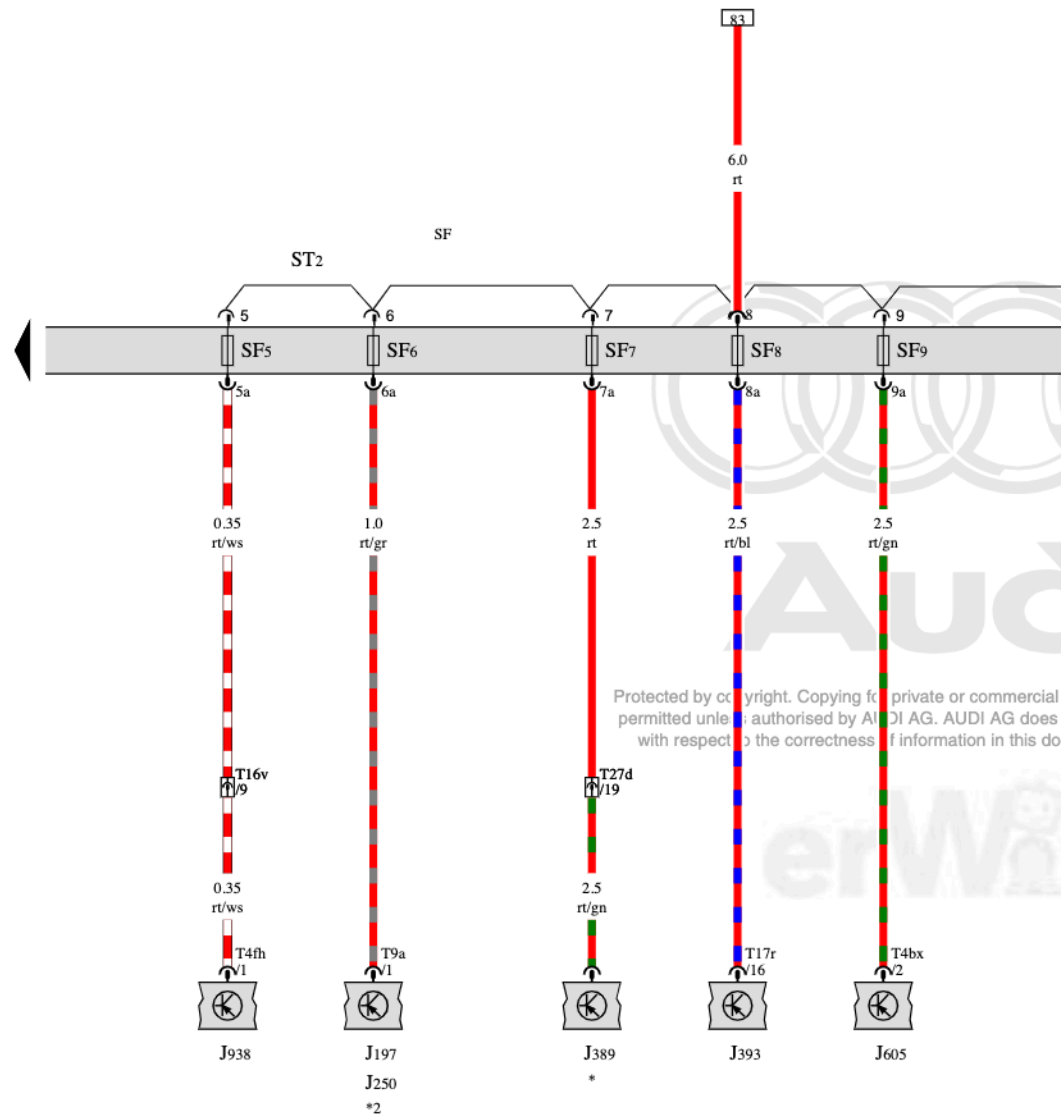

- J197 Level Control System Control Module
- J250 Electronic Damping Control Module
- J389 Right Rear Door Control Module
- J393 Comfort System Central Control Module
- J605 Rear Lid Control Module
- J938 Power Rear Lid Opening Control Module
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- ST2 Fuse Panel 2, Red
- SF5 Fuse 5 (On Fuse Panel F)
- SF6 Fuse 6 (On Fuse Panel F)
- SF7 Fuse 7 (On Fuse Panel F)
- SF8 Fuse 8 (On Fuse Panel F)
- SF9 Fuse 9 (On Fuse Panel F)
- T4bx 4-Pin Connector
- T4fh 4-Pin Connector
- T9a 9-Pin Connector
- T16v 16-Pin Connector, In the Luggage Compartment, Right Rear, Brown
- T17r 17-Pin Connector
- T27d 27-Pin Connector, On the Right B-Pillar, Black
- * Refer to Applicable Convenience System Wiring Diagram
- *2 Depending on Equipment


Fuse Panel F, Fuse Panel 2

- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- ST2 Fuse Panel 2, Red
- SF10 Fuse 10 (On Fuse Panel F)
- SF11 Fuse 11 (On Fuse Panel F)
- SF12 Fuse 12 (On Fuse Panel F)
- T6g 6-Pin Connector
- V1 Sunroof Motor
- * Avant

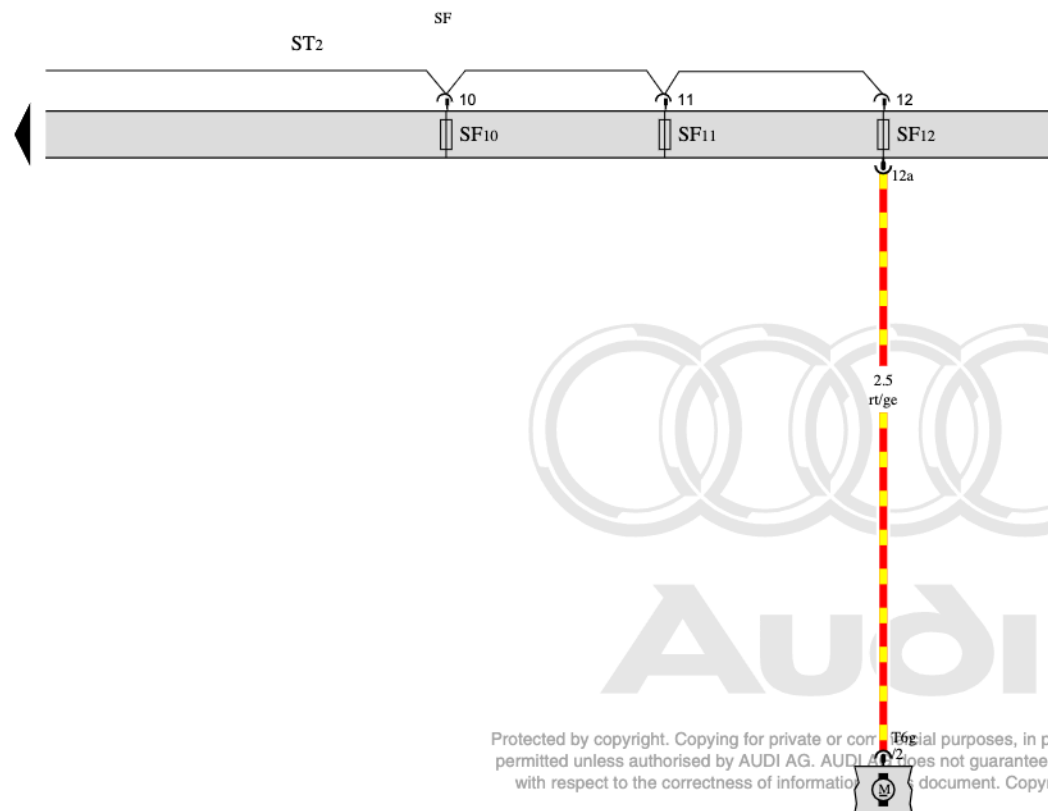

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

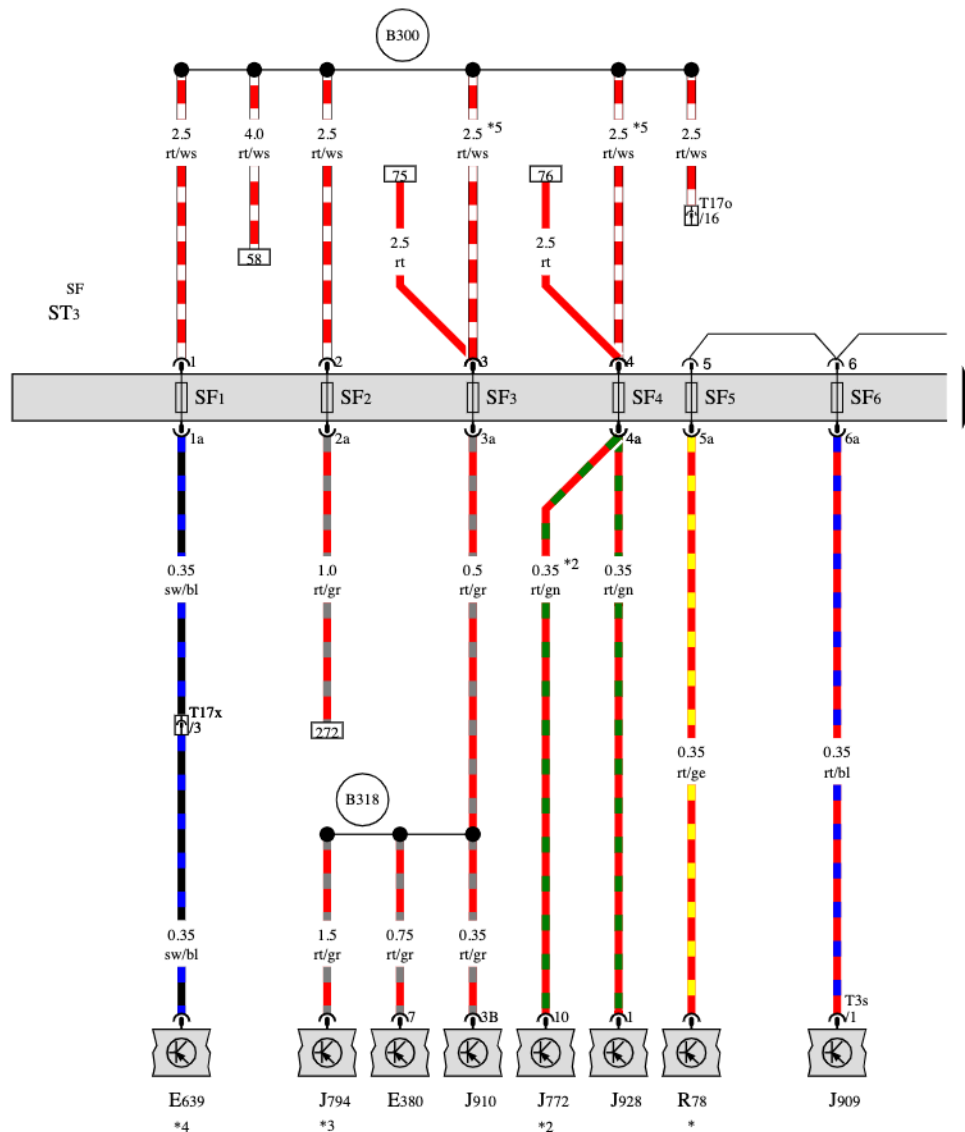

Fuse Panel F, Fuse Panel 3


- E380 Multimedia System Control Head
- E639 Information Electronics Remote Control 1
- J772 Rearview Camera System Control Module
- J794 Information Electronics Control Module 1
- J909 Fuel Tank Leak Detection Control Module
- J910 Automatic Dimming Interior Rearview Mirror Relay
- J928 Peripheral Camera Control Module
- R78 TV Tuner
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- SF1 Fuse 1 (On Fuse Panel F)
- SF2 Fuse 2 (On Fuse Panel F)
- ST3 Fuse Panel 3, Brown
- SF3 Fuse 3 (On Fuse Panel F)
- SF4 Fuse 4 (On Fuse Panel F)
- SF5 Fuse 5 (On Fuse Panel F)
- SF6 Fuse 6 (On Fuse Panel F)
- T3s 3-Pin Connector
- T17o 17-Pin Connector, In the Connector Station, Right A-Pillar, Black
- T17x 17-Pin Connector, In the Coupling Point for the Rear Center Armrest, Brown
- B300 Positive Connection 4 (30) (in Main Wiring Harness)
- B318 Positive Connection 4 (30a) (in Main Wiring Harness)
- * Refer to the Applicable TV Tuner Wiring Diagram
- *2 Through April 2015
- *3 Refer to Applicable Wiring Diagram
- *4 For Vehicles with China Equipment
- *5 For Vehicles with Start/Stop System

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink


Fuse Panel F, Fuse Panel 3

- E177 Front Passenger Seat Lumbar Support Adjustment Switch
- J794 Information Electronics Control Module 1
- J807 Sockets Relay
- R64 Parking Heater Radio Receiver
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- ST3 Fuse Panel 3, Brown
- SF7 Fuse 7 (On Fuse Panel F)
- SF8 Fuse 8 (On Fuse Panel F)
- SF9 Fuse 9 (On Fuse Panel F)
- SF10 Fuse 10 (On Fuse Panel F)
- SF11 Fuse 11 (On Fuse Panel F)
- SF12 Fuse 12 (On Fuse Panel F)
- T6be 6-Pin Connector
- T6v 6-Pin Connector
- T8f 8-Pin Connector
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat, Red
- * For Vehicles with a Parking Heater
- *2 For Vehicles with Lumbar Support Adjustment

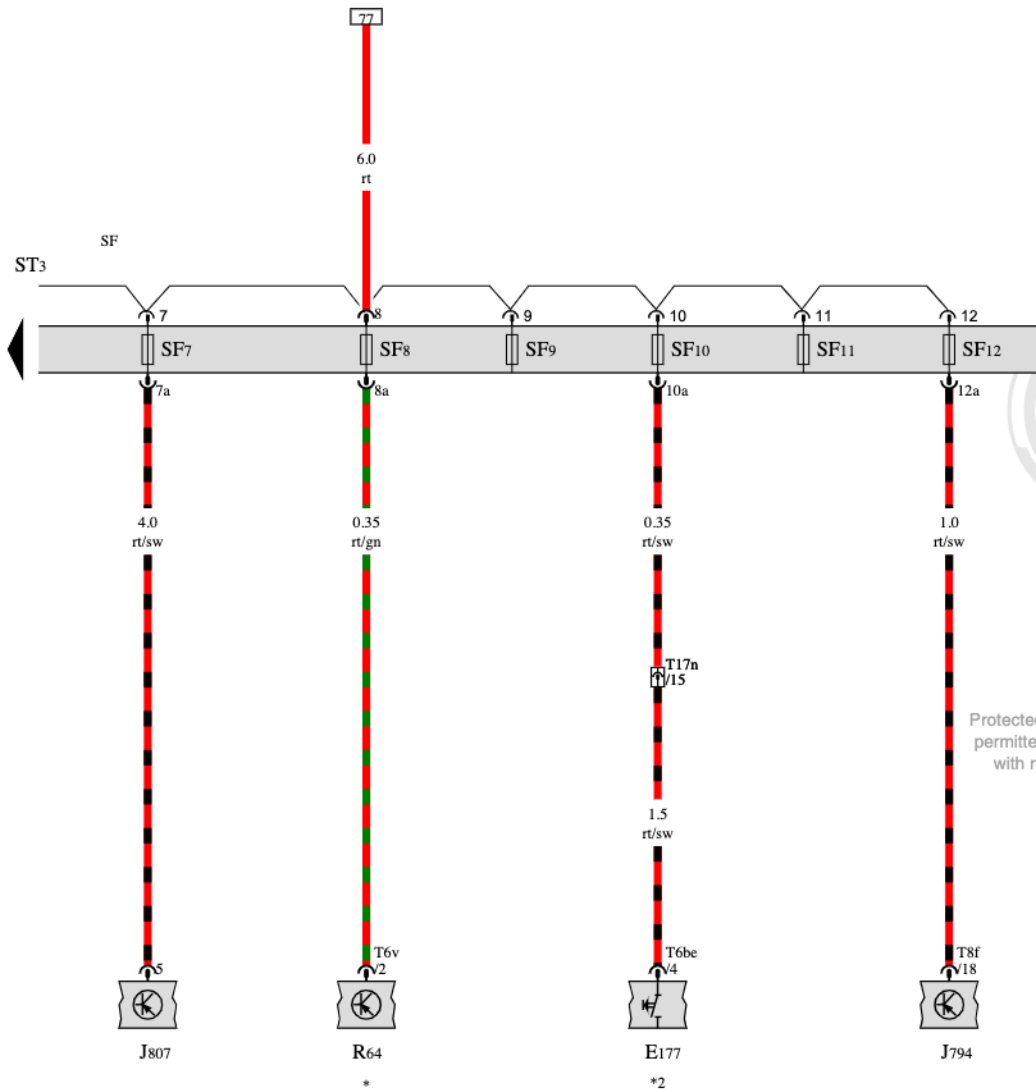

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

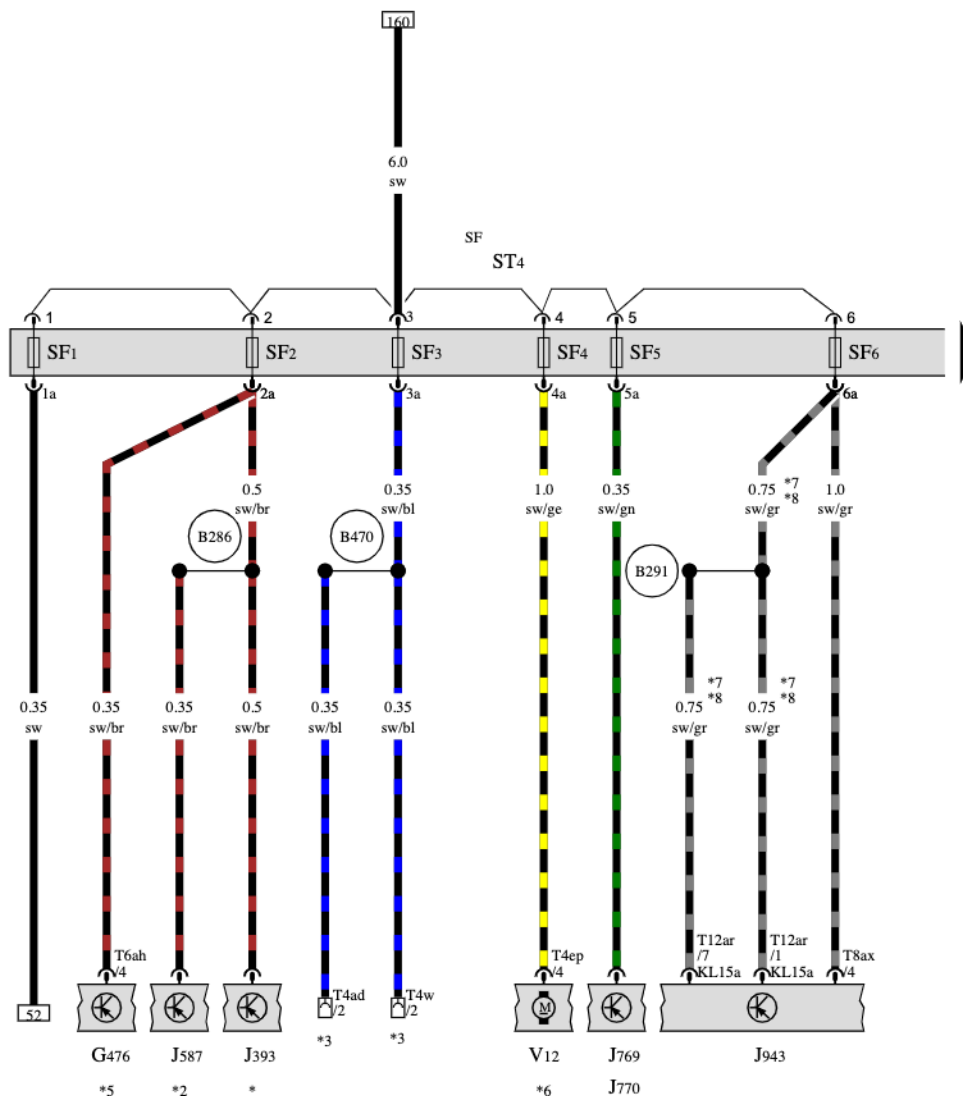

Fuse Panel F, Fuse Panel 4

- G476 Clutch Position Sensor
- J393 Comfort System Central Control Module
- J587 Selector Lever Sensor System Control Module
- J769 Lane Change Assistance Control Module
- J770 Lane Change Assistance Control Module 2
- J943 Engine Sound Generator Control Module
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- SF1 Fuse 1 (On Fuse Panel F)
- SF2 Fuse 2 (On Fuse Panel F)
- SF3 Fuse 3 (On Fuse Panel F)
- ST4 Fuse Panel 4, Black
- SF4 Fuse 4 (On Fuse Panel F)
- SF5 Fuse 5 (On Fuse Panel F)
- SF6 Fuse 6 (On Fuse Panel F)
- T4ad 4-Pin Connector
- T4ep 4-Pin Connector
- T4w 4-Pin Connector
- T6ah 6-Pin Connector
- T8ax 8-Pin Connector
- T12ar 12-Pin Connector, Black
- V12 Rear Window Wiper Motor

B286 Positive Connection 10 (15a) (in Main Wiring Harness)

B291 Positive Connection 15 (15a) (in Main Wiring Harness)

B470 Connection 6 (in Main Wiring Harness)

- * Refer to Applicable Convenience System Wiring Diagram
- *2 Refer to Applicable Wiring Diagram for Automatic Transmission
- *3 For Vehicles with Rear Seat Entertainment (RSE) Prep
- *4 Refer to Applicable Wiring Diagram
- *5 For Vehicles with a Manual Transmission
- *6 Avant
- *7 From July 2017
- *8 For Vehicles with Hybrid Drive

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Fuse Panel F, Fuse Panel 4

- E265 Rear A/C Display Control Head
- J318 Vacuum Pump Relay
- J364 Auxiliary Heater Control Module
- J492 All-Wheel Drive Control Module
- J502 Tire Pressure Monitoring Control Module
- J525 Digital Sound System Control Module
- J533 Data Bus on Board Diagnostic Interface
- J794 Information Electronics Control Module 1
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- ST4 Fuse Panel 4, Black
- SF7 Fuse 7 (On Fuse Panel F)
- SF8 Fuse 8 (On Fuse Panel F)
- SF9 Fuse 9 (On Fuse Panel F)
- SF10 Fuse 10 (On Fuse Panel F)
- SF11 Fuse 11 (On Fuse Panel F)
- SF12 Fuse 12 (On Fuse Panel F)
- T2az 2-Pin Connector
- T12ao 12-Pin Connector
- T20a 20-Pin Connector
- T32b 32-Pin Connector
- T47a 47-Pin Connector

B607 Connection 3 (in Interior Wiring Harness)

- * Refer to Applicable Wiring Diagram
- *2 For Vehicles with Hybrid Drive
- *3 For Vehicles with 400 W Voltage Stabilizer
- *4 From January 2018

